



WF906U4SA**
WF806U4SA**

Washing Machine

user manual

Planet
First

100%
Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

SAMSUNG

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

- **Energy Saving**

This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Samsung Inverter motor.

- **Eco Bubble Wash**

Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Less Noise & Vibration**

This Samsung washer performs very quietly minimizing noise and vibration with smart control technology, which enables it to maintain the lowest possible vibration. Thus, the drum keeps perfect balance.

- **Quick Wash**

No time to waste! Quick Wash program can help your busy life - now you can wash your favorite clothes (up to 2Kg) in 15 minutes!

- **Eco Drum Clean**

Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Baby Care**

Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

- **Hand Wash**

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Delay End**

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Child Lock**

The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Aqua Hose & Leakage Sensor (Selected models)**

The smartly designed water safety system for Samsung washing machines includes an intelligent hose for stopping water leaks at the source and leakage sensor at the bottom. If the hose breaks or if water leaks are detected, an internal sponge will expand to block water from the spigot.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

Our truly innovative Ceramic Heater is twice as durable as regular heaters. That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

- **Digital Graphic Display**

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The “**Troubleshooting and information codes**” section on page 37 tells you what to do if something goes wrong with your new washing machine.

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

 WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
 CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.

Please follow them explicitly.

After reading this section, keep it in a safe place for future reference.

-  Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

safety information



SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 230V / 50Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



CAUTION

CAUTION SIGNS FOR INSTALLATION



- This appliance should be positioned in such a way that it is accessible to the power plug.
- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



WARNING

SEVERE WARNING SIGNS FOR USING



- If the appliance is flooded, turn off the water & power supply immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may cause electric shock.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

safety information

-  Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance.

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock.

-
-  Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as copper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

-
-  If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



CAUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.

Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

safety information



Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen Bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as Bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.



WARNING

SEVERE WARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

contents

SETTING UP YOUR WASHING MACHINE

13

- 13 Checking the parts
- 14 Meeting installation requirements
 - 14 Electrical supply and grounding
 - 14 Water Supply
 - 15 Drain
 - 15 Flooring
 - 15 Surrounding temperature
 - 15 Alcove or closet installation
- 15 Installing your washing machine

WASHING A LOAD OF LAUNDRY

21

- 21 Washing for the first time
- 21 Basic instructions
- 22 Using the control panel
 - 25 Child lock
 - 25 Sound off
 - 26 Delay end
 - 26 My cycle
 - 27 Eco Bubble
 - 28 Washing clothes using the cycle selector
 - 29 Washing clothes manually
- 29 Laundry guidelines
- 30 Detergent and additives information
 - 30 Which detergent to use
 - 31 Detergent drawer
 - 31 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE

32

- 32 Eco Drum Clean
- 33 Draining the washing machine in an emergency
- 34 Cleaning the debris filter
- 34 Cleaning the exterior
- 35 Cleaning the detergent drawer and drawer recess
- 35 Cleaning the water hose mesh filter
- 36 Repairing a frozen washing machine
- 36 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES

37

- 37 Check these points if your washing machine...
- 38 Information codes

CYCLE CHART

39

- 39 Cycle chart

APPENDIX

40



- 40 Fabric care chart
- 40 Protecting the environment
- 40 Declaration of conformity
- 41 Sheet of household washing machines

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

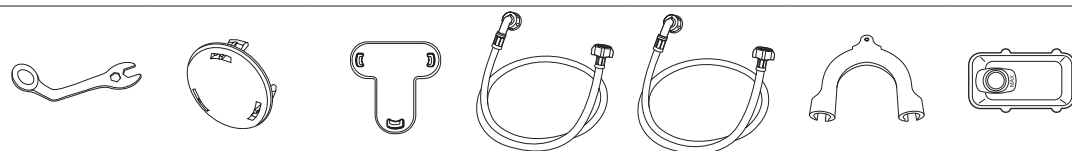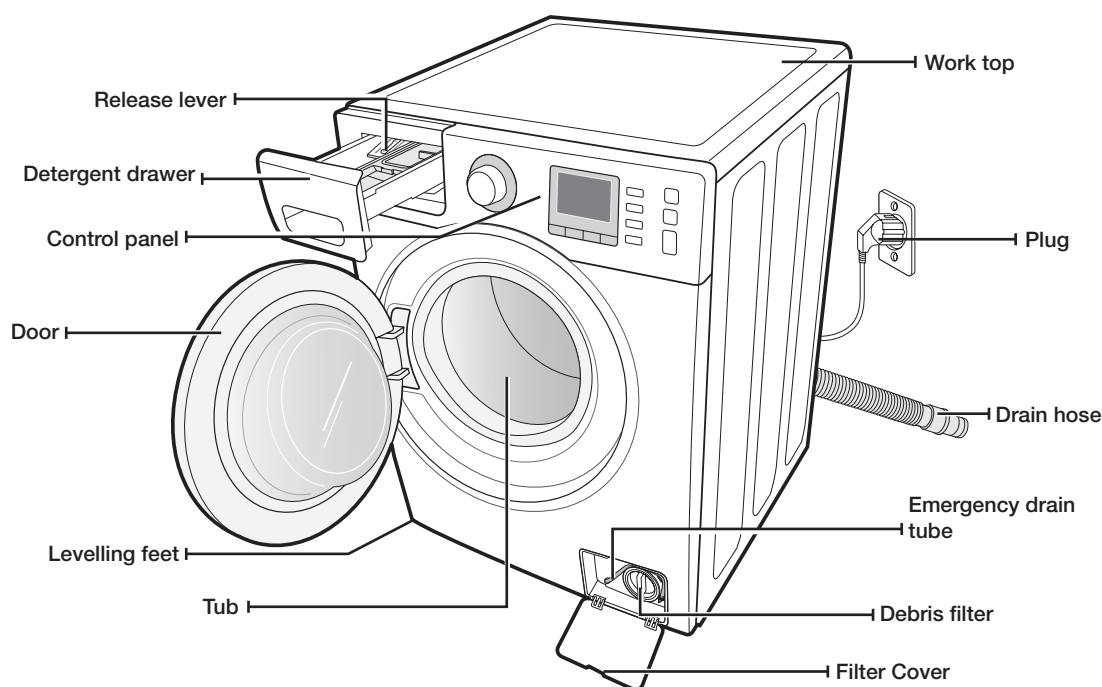

Spanner

* Bolt hole covers

Cap fixer

Cold

Hot (Selected model)

Water supply hose

Hose guide

Liquid detergent box (Selected model)



* **Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding



Never use an extension cord.
WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- AC 220-240 V / 50 Hz / 15 A fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.



WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm
Top – 25 mm

Rear – 50 mm
Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 °C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord


setting up your washing machine

STEP 2


Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

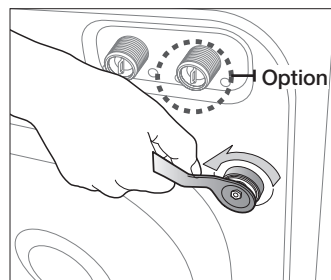

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

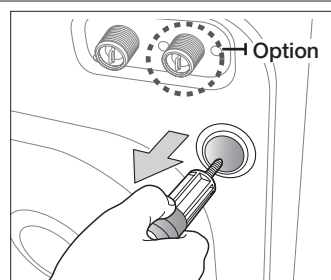

3. Fill the holes with the supplied plastic covers.

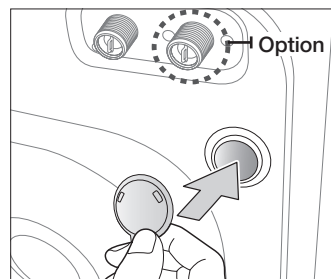

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.



WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.


STEP 3

Adjusting the Levelling feet


 When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.

2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

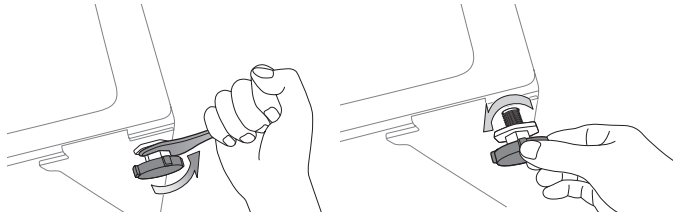

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

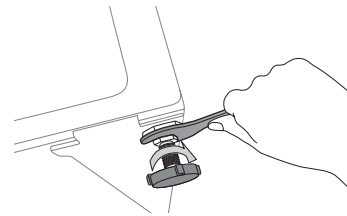

STEP 4


Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

 The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

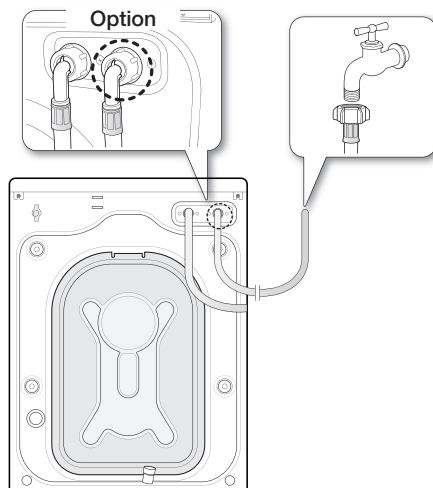


For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.


setting up your washing machine

Connecting the water supply hose


1. Remove the adaptor from the water supply hose.

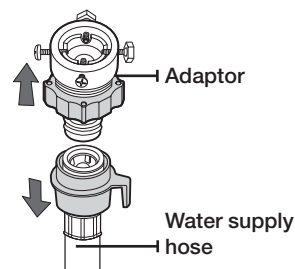

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

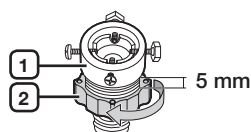


3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

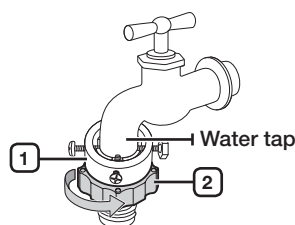


4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

-  After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

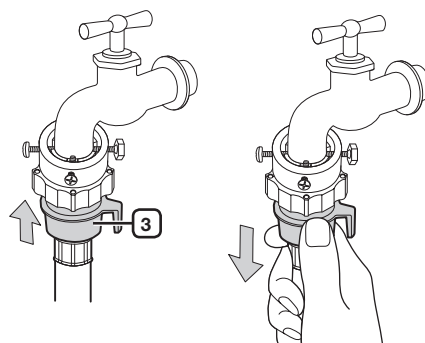

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

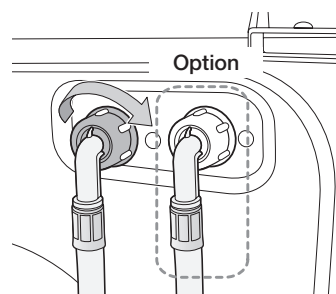


6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leak, repeat the previous steps.




WARNING

Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

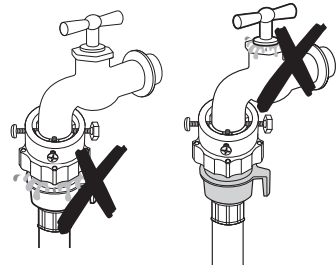

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

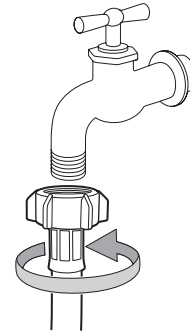


- Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

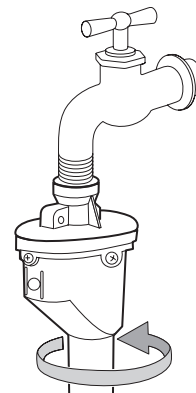


setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. **Over the edge of a wash basin:** The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.
2. **In a sink drain pipe branch:** The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

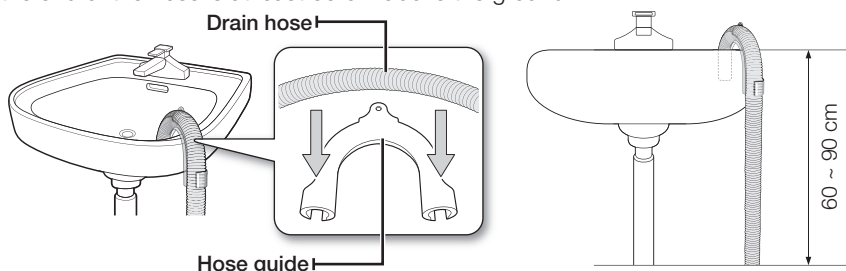


3. **In a drain pipe:** We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.



The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

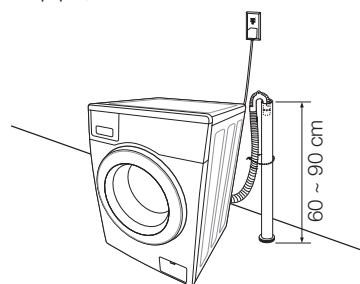

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)



Test run

Make sure that you install your washing machine correctly by running the **Rinse+Spin** cycle after the installation is complete.

STEP 6

Calibration mode

Samsung washing machine detects the laundry weight automatically. For more accurate weight detection, please run Calibration Mode after the installation. Calibration mode is done by following the steps below.

1. Remove laundry or any contents in the machine and turn off the machine.
2. Press the **Temp** button and **Delay End** button simultaneously, and press the **Power** button in addition. Then the machine turns on.
3. Press the **Start** button to activate "Calibration Mode".
4. The drum rotates clockwise and counterclockwise approximately for 3 minutes.
5. When "Calibration Mode" is finished, "END(En)" appears on the display, and the machine automatically turns off. The washing machine is now ready for use.

washing a load of laundry


With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

 Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment ① in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

 This will remove any water that might be left over in the machine from the manufacturer's test run.

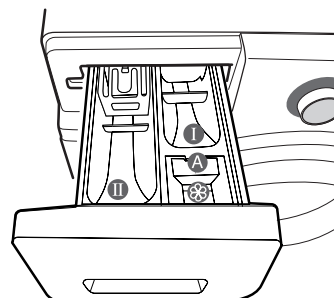

Compartment ①: Detergent for prewash, or starch.

Compartment ②: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

 To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment A: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A").

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

 **WARNING** Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

-  • Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
- Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
- Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

washing a load of laundry

USING THE CONTROL PANEL



1 CYCLE SELECTOR

Select the tumble pattern and spin speed for the cycle.

 For detailed information, refer to “Washing clothes using the cycle selector”. (see page 28)

Cotton - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

Denim - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

Bedding - For bed spread, bed sheet, Bedding cover etc.

 Wash under 2.5 kg and only 1 kind of Bedding to achieve the best result.

Dark Garment - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

Daily Wash - Use for everyday items such as underwear and shirts.

Eco Drum Clean - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

Super Eco Wash - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

Outdoor Care - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

Baby Care - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes.

Wool - Only for machine-washable wool. A load should be less than 2.0 kg.

- The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem.
- Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.

Hand Wash - A very light wash cycle as gentle as a hand wash.

Spin - Performs an additional spin cycle to remove more water.

Rinse + Spin - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

2	DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
3	TEMP SELECTION BUTTON	Press this button repeatedly to cycle through the available water temperature options: (Cold Water  , 20 °C, 30 °C, 40 °C , 60 °C and 95 °C).
4	RINSE SELECTION BUTTON	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
5	SPIN SELECTION BUTTON	Press the button repeatedly to cycle through the available speeds for the spin cycle.
		<table><tr><td>WF906U4/WF806U4</td><td>, , 400, 800, 1200, 1400 rpm</td></tr></table> “No spin ” - The laundry remains in the drum and no spin cycle is performed after the final drain. “Rinse Hold ” - The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
WF906U4/WF806U4	 ,  , 400, 800, 1200, 1400 rpm	
6	OPTION SELECTION BUTTON	Press this button repeatedly to cycle through the options: Soak  → Intensive  → Prewash  → Soak  + Intensive  → Soak  + Prewash  → Intensive  + Prewash  → Soak  + Intensive  + Prewash  → off “Prewash ”: Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby Care. “Soak ”: Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Daily Wash, Super Eco Wash , Baby Care. “Intensive ”: Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
7	ECO BUBBLE SELECTION BUTTON	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. • Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). • Other wash cycles do not need this option and automatically turn the Generator OFF. • On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
8	EASY IRON SELECTION BUTTON	Press this button to prepare your laundry so that it can be easily ironed by reducing the wrinkles during the spin cycle. • Easy Iron is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Dark garment, Daily wash, Super Eco Wash, Baby Care • When Easy Iron is selected, you can set the spin cycle speed up to 800 rpm. (If you select Easy Iron with a spin cycle speed set to higher than 800 rpm, the spinning speed is automatically changed to 800 rpm.)

washing a load of laundry

9 QUICK WASH SELECTION BUTTON	For lightly soiled garments and less than 2 kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalanced load, fluctuation in the electricity supply and extra options selected. Press this button repeatedly to choose cycle time: 15 min → 20 min → 30 min → 40 min → 50 min → 1 hr → Off  Powdered/Liquid detergent should be under 20 g (for 2 kg load) or WARNING detergent may remain on the clothes.
10 DELAY END SELECTION BUTTON	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
11 START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.
12 MY CYCLE SELECTION BUTTON	Choose your favorite cycle including temperature, spin, soil level, option, etc.
13 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

Child lock


The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.



When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

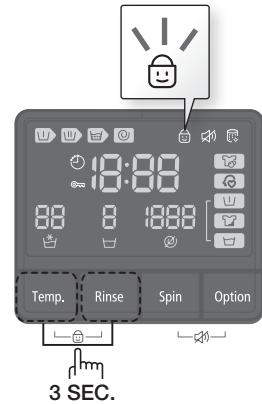


Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

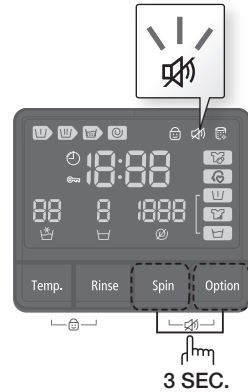

washing a load of laundry

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The “**Delay End** ⌚” indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The “**My Cycle**” light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
 2. Press the **Power** button.
 3. Select cycle using the **Cycle Selector**.
 4. After cycle selection, set each option.
-  See the “Cycle Chart” on page 39 for available option settings with each cycle.
5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.
-  You can change the My Cycle settings by repeating the same process above. The last used setting will be displayed the next time you choose the My Cycle function.
-  If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.



The bubble function is available in all courses except for Eco Drum Clean course and the function availability is as follows.

Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash		Not available
Eco Drum Clean	Not available	-


- A different bubble function may be applied depending the course.



Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.

- Add the appropriate amount of detergent into the detergent compartment ①, and add the fabric softener to softener compartment ② just under the fiber softener base line (MAX) of "A".
- When the Prewash course is selected, add detergent into the prewash compartment ③ as well.
- To use liquid detergent, leave the liquid detergent box in the drawer (refer to "Liquid Detergent" section on page 31).

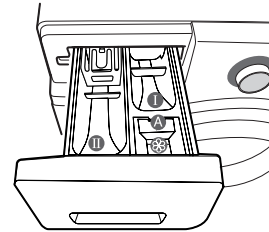

Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
 - Press the **Start/Pause** button to start the wash.
 - The amount of the laundry is automatically detected and the laundry is washed.
 - Once a washing machine operation begins, you cannot add or select the bubble function.



- Enough bubbles are generated with the specified amount of detergent.
- Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
- Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
- Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
 2. Press the **Power** button.
 3. Open the door.
 4. Load the articles one at a time loosely into the drum, without overfilling it.
 5. Close the door.
 6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.
-  Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Super Eco Wash, Baby care cycles. It is only necessary if your clothing is heavily soiled.
7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Eco Drum Clean, Super Eco Wash, Outdoor Care, Baby Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
 8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
 9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.
-  The door cannot be opened when the water is too HOT or the water level is too HIGH.
2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp** button to select the temperature. (Cold Water , 20 °C, 30 °C, 40 °C, 60 °C, 95 °C)
8. Press the **Rinse** button to select the required number of rinse cycles.
The maximum number of rinse cycles is five.
The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed. ( : No Spin;  : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

 Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

washing a load of laundry

Determining the load capacity


Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
	Model	
	WF906	WF806
Cotton - average/lightly soiled - heavily soiled	9.0 kg	8.0 kg
Synthetics	3.5 kg	3.0 kg
Denim	3.0 kg	3.0 kg
Bedding	2.0 kg	2.0 kg
Outdoor Care	2.0 kg	2.0 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Bedding cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Bedding cover, the recommended load capacity is 2.5 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

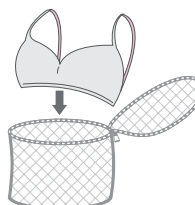

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

- Do not use detergent that has hardened or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

- Powdered detergent should be thoroughly dissolved in a small amount of warm water before adding to the machine.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.



-  Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment ① before starting your washing machine.

-  To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.
3. Add the recommended amount of fabric softener into the softener compartment ② if required. DO NOT exceed the MAX FILL (A) line.

 **CAUTION** Do NOT add any powder/liquid **detergent** to the softener compartment (②).

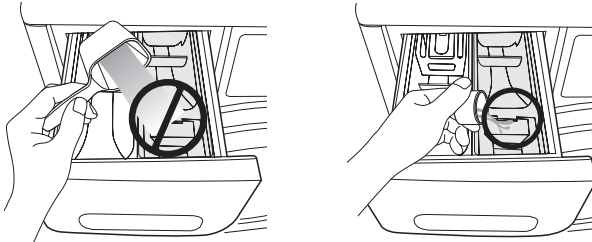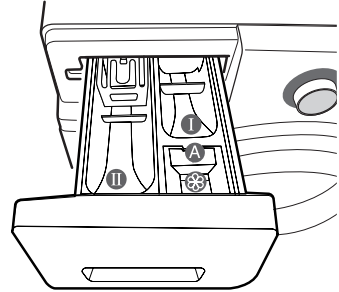


4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ③.

-  When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

-  Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).


-  Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

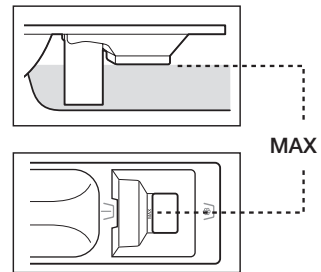

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

-  DO NOT fill above the MAX line.
- When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
- After a wash, some liquid may remain in the detergent drawer.

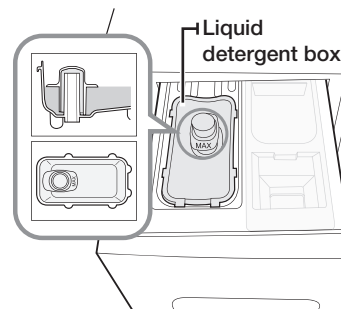

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

ECO DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.


1. Press the **Power** button.
2. Turn the **Cycle Selector** to the ECO Drum Clean course.
 - You can only use the Delay End function.
 - The water temperature during the ECO Drum Clean is set to 70 °C.

You cannot change the temperature.

- It will auto set cotton 30 °C middle water level program when cloth is put in.



3. Place the appropriate amount of cleansing agent into the detergent compartment ⑪ and close the detergent drawer (when cleaning the drum using a cleansing agent).
 - Be sure to use the recommended cleansing agent for cleaning the drum.
 - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

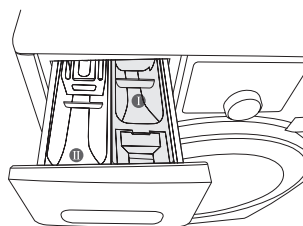


4. Press the **Start/Pause** button.
 - If you press the **Start/Pause** button, the ECO Drum Clean course begins.
- Using the ECO Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the ECO Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the ECO Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
 - Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
 - Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
 - Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].



The ECO Drum Clean Auto Alarm Function


- If the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the ECO Drum Clean course.
- If you do not perform the ECO Drum Clean course, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “ECO Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the ECO Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.

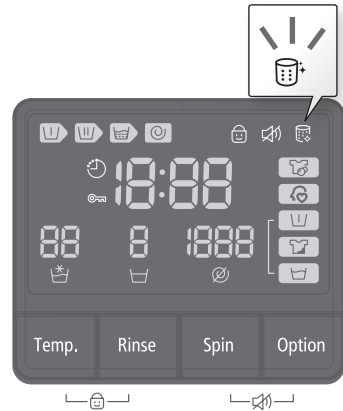


- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 34). Otherwise the performance of the bubble function may lower down.**

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

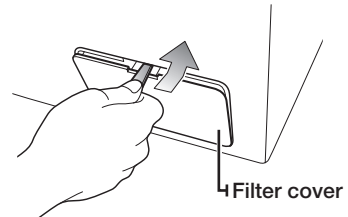


3. Open the emergency drain cap by pulling it.

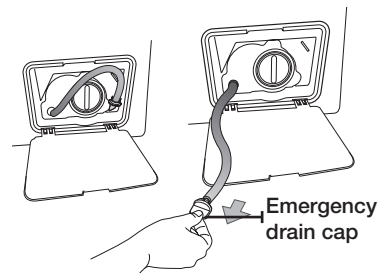

4. Hold the cap on the end of the emergency drain tube and slowly pull it out.
5. Allow all the water to flow into a bowl.
6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.



Remain water maybe more than you expected. Prepare larger bowl.

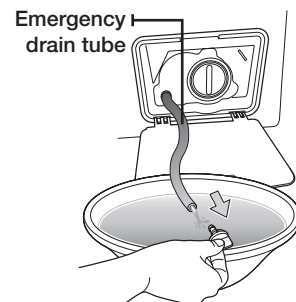

cleaning and maintaining your washing machine

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of “5E” is displayed. (Refer to “Draining the washing machine in an emergency” in the previous section.) If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.



CAUTION


Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to “Draining the washing machine in an emergency” on page 33.)
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.



If you separate the filter without draining the remaining water, the remaining water may trickle out.

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

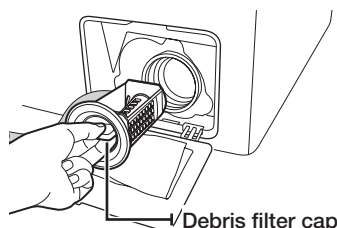


CAUTION

Do not open the debris filter cap while the machine is running or hot water may flow out.



- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

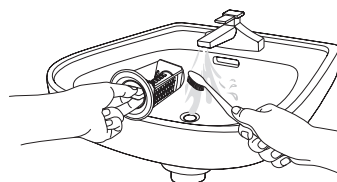


CLEANING THE EXTERIOR


1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS


1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

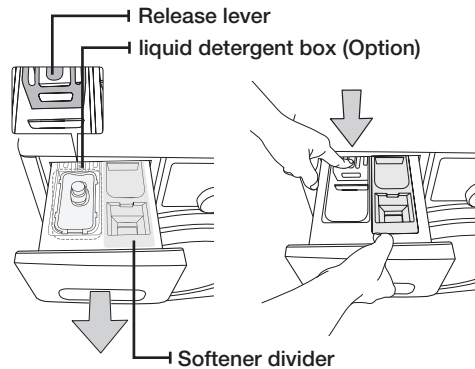

3. Wash all parts under running water.

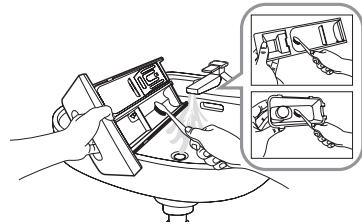

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

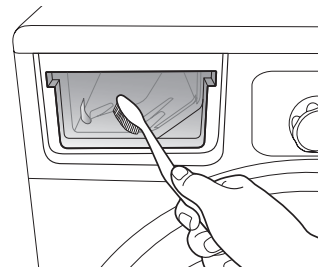

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton** cycle and push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.



If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sd/Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		DETERGENT			Max Temp (°C)	Spin Speed(MAX) rpm
	WF906	WF806	Pre-wash	wash	Softener		WF906U4 WF806U4
Cotton	9.0	8.0	●	yes	●	95	1400
Synthetics	3.5	3.0	●	yes	●	60	1200
Denim	3.0	3.0	●	yes	●	60	800
Bedding	2.0	2.0	●	yes	●	40	800
Dark Garment	4.0	4.0	●	yes	●	40	1200
Daily Wash	4.0	4.0	●	yes	●	60	1400
Eco Drum Clean	-	-	-	yes	-	70	400
Super Eco Wash	4.0	4.0	●	yes	●	40	1200
Outdoor Care	2.0	2.0	-	yes	●	40	1200
Baby Care	4.0	4.0	●	yes	●	95	1400
Wool	2.0	2.0	-	yes	●	40	800
Hand Wash	2.0	2.0	-	yes	●	40	400

PROGRAM	Eco Bubble	Delay end	Easy Iron	Intensive	Soak	Quick Wash
Cotton	●	●	●	●	●	●
Synthetics	●	●	●	●	●	-
Denim	●	●	●	●	●	-
Bedding	●	●	●	●	●	-
Dark Garment	●	●	●	●	-	-
Daily Wash	●	●	●	●	●	-
Eco Drum Clean	-	●	-	-	-	-
Super Eco Wash	●	●	●	●	●	-
Outdoor Care	●	●	-	-	-	-
Baby Care	●	●	●	●	●	-
Wool	●	●	-	-	-	-
Hand Wash	●	●	-	-	-	-

1. A cycle with a prewash takes approx. 18 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC60456/ EN60456.
Cotton 60°C + Intensive + Eco Bubble are programs according to EN60456.
Please run Calibration Mode after the installation (see page 20).
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Can be ironed at 100 °C max
	Delicate fabric		Do not iron
 	Item may be washed at 95 °C		Can be dry cleaned using any solvent
 	Item may be washed at 60 °C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
 	Item may be washed at 40 °C		Dry clean with aviation fuel, pure alcohol or R113 only
 	Item may be washed at 30 °C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 °C max		Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WF906U4SA**	
			W600mm X D600mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			54 ℓ	
NET WEIGHT			WF906U4SA**	
			70 kg	
WASH AND SPIN CAPACITY			9.0 kg	
POWER CONSUMPTION	MODEL		WF906U4SA**	
	WASHING		220 V	60 W
			240 V	60 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	SPIN	MODEL	WF906U4SA**	
		230V	400 W	
PUMPING		34 W		
SPIN REVOLUTIONS	MODEL		WF906U4SA**	
	rpm		1400	





The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

appendix

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WF806U4SA**	
			W600mm X D600mm X H850mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			48 ℓ	
NET WEIGHT			WF806U4SA**	
			67 kg	
WASH AND SPIN CAPACITY			8.0 kg	
POWER CONSUMPTION	MODEL		WF806U4SA**	
	WASHING		220 V	60 W
			240 V	60 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	SPIN	MODEL	WF806U4SA**	
		230V	400 W	
	PUMPING		34 W	
SPIN REVOLUTIONS			MODEL	
			rpm	
			WF806U4SA**	
			1400	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.





Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Code No. DC68-03205Q-02_EN

WF906U4SA**
WF806U4SA**



מכונת כביסה מדריך למשתמש

**Planet
First** 100%
Recycled Paper

מדריך זה מודפס על-גבי 100% נייר ממוחזר.

דמיינו את האפשרויות

תודה על שרכשת מוצר זה מבית Samsung.
לקבלת שירות מלא יותר, אנא רשום את המוצר
שברשותך בכתובת

www.samsung.com/register

SAMSUNG

תכונותיה של מכונת הכביסה החדשה שלך מבית Samsung

מכונת הכביסה החדשה שלך תשנה את הרגשתך ביחס לכביסה. החל מהפונקציה הייחודית Eco Bubble ועד ליעילות בצריכת אנרגיה, מכונת הכביסה החדשה של Samsung כוללת את כל היתרונות שיהפכו את ביצוע הכביסה לקל ונעים ככל האפשר.

• חיסכון באנרגיה

דגם זה חסכוני יותר באנרגיה בהשוואה למכונות כביסה בעלות דירוג אנרגטי A הודות למערכת יצירת הבועות המיוחדת ולמנוע האינורטר של Samsung.

• כביסה בטכנולוגיית Eco Bubble

פונקציית Eco Bubble היעילה שפיתחה Samsung מספקת רמת ניקיון משופרת עם טיפול מתקדם בבדים. הודות ל-Eco Bubble חומרי הכביסה מתפזרים בצורה שווה וחוזרים מהר יותר ועמוק יותר לסיבי הבד.

• שקטה יותר ועם פחות רעידות

עבודתה של מכונת הכביסה של Samsung שקטה מאוד הודות לטכנולוגית בקרה חכמה שממזערת את דרגת הרעש והרעידות וכך מאפשרת למכונה לעבוד בצורה שקטה וללא רעידות רבות. כך, התוף שומר על איזון מושלם.

• Quick Wash (כביסה מהירה)

אין זמן לבזבז! תוכנית הכביסה המהירה יכולה להקל על חיך העמוסים - עכשיו תוכל לכבס את הבגדים האהובים עליך (עד 2 ק"ג) ב-15 דקות!

• Eco Drum Clean (ניקוי תוף ידידותי לסביבה)

שימוש ב-Eco Drum Clean (ניקוי תוף ידידותי לסביבה) מסייע לשמור על ניקיון מכונת הכביסה גם ללא כל חומר ניקוי או הלבנה כימי. שמור על תוף נקי ונטול ריחות עם תוכנית ניקוי ייחודית.

• Baby Care (בגדי תינוקות)

מכונת הכביסה מבית Samsung כוללת תוכניות כביסה המגנות על בגדיהם של ילדים בעלי עור רגיש. התוכניות הללו מפחיתות את גירוי העור על ידי כך שהן ממזערות את כמותן של שאריות אבקת/נוזל הכביסה. בנוסף, תוכניות אלו ממיינות את התכולה לסוגים שונים, כך שהכביסה מתבצעת בהתאם למאפייני סוג הבד וכתוצאה בגדי הילדים ירגישו נקיים ורעננים.

• Hand Wash (כביסה ידנית)

ניתן להגדיר את מאפייני הכביסה על ידי כוונן הטמפרטורה, פעולת הכביסה העדינה וכמות המים המתאימה

• Delay End (השהיית סיום)

השהה את תוכנית הכביסה עד לפרק זמן של 19 שעות, במדרגות של שעה אחת, כדי להגדיל את נוחיות השימוש במכונת הכביסה, בייחוד כאשר אתה צריך לצאת.

• נעילת ילדים

פונקציית נעילת הילדים מבטיחה כי ידיים קטנות וסקרניות לא ישחקו עם מכונת הכביסה שלך. תכונת בטיחות זו מונעת מילדייך לשחק עם לוח בקורות מכונת הכביסה, והיא מתריעה בפניך כאשר המכונה הופעלה.

• צינור מים וחיישן דליפה (בדגמים נבחרים)

מערכת ההגנה החכמה מפני דליפת מים שבה מצוידות מכונות הכביסה של Samsung בנויה מצינור חכם לעצירת דליפת המים ומחיישן לזיהוי דליפה בקצה התחתון. אם הצינור נסדק או כאשר מזוהה דליפת מים, ספוג מובנה יתרחב כדי למנוע מהמים להגיע לברז.

• מחמם קרמי לעמידות וחסכון באנרגיה (בדגמים נבחרים)

המחמם הקרמי החדשני שלנו עמיד פי שניים בהשוואה למחממים רגילים. עמידותו חוסכת עלויות תיקון. בנוסף, הוא מונע את היווצרות המשקעים של המים הקשים וחוסך באנרגיה.

• תצוגה גרפית דיגיטלית

לוח הבקרה של התצוגה הגרפית הדיגיטלית ברור וקל לשימוש, למניעת מאמץ וטרחה. התצוגה הגרפית הדיגיטלית קלה לתפעול, ועם זאת היא מאפשרת לך לבצע כוונונים מהירים ומדויקים בתהליך הכביסה לקבלת תוצאות מעולות.

מדריך זה מכיל מידע חשוב בנוגע להתקנה, שימוש וטיפול במכונת הכביסה החדשה מבית Samsung. המדריך מכיל מידע אודות לוח הבקרה, הוראות שימוש ועצות להפקת התועלת המרבית מהתכונות והפונקציות החדשות של מכונת הכביסה. הפרק "קודי מידע ואיתור ופתרון תקלות" בעמוד 37 מכיל מידע שיסייע לך כאשר מכונת הכביסה החדשה שלך לא עובדת כשורה.

מידע בטיחות

אנו מברכים אותך על רכישת מכונת הכביסה החדשה מבית Samsung. מדריך זה כולל מידע חשוב לגבי התקנת המכשיר, השימוש והטיפול בו. הקדש זמן לקריאת מדריך זה כדי לנצל בצורה הטובה ביותר את שפע התכונות והיתרונות של מכונת הכביסה שברשותך.

נושאי בטיחות שעליך להכיר

קרא מדריך זה ביסודיות כדי להבטיח שתדע כיצד להפעיל בבטחה וביעילות את הפונקציות והתכונות המקיפות של המכשיר החדש שרכשת, ושמור אותו במקום בטוח ליד המכשיר, לעין בשעת הצורך. השתמש במכשיר זה רק למטרתו המיועדת בהתאם להוראות המפורטות במדריך זה.

התראות והנחיות בטיחות חשובות הכלולות במדריך זה אינן מכסות את כל התנאים והמצבים שעלולים להתרחש. באחריותך להפעיל שיקול דעת, זהירות ותשומת לב במהלך ההתקנה, התחזוקה והתפעול של מכונת הכביסה. מאחר שהנחיות התפעול הבאות חלות על מספר דגמים, מאפייני מכונת הכביסה שלך עשויים להיות שונים במקצת מאלה המתוארים במדריך זה וייתכן שלא כל סימני האזהרה יהיו ישימים. אם יש לך שאלות או ספקות, פנה אל מרכז השירות הקרוב אליך או חפש סיוע ומידע באופן מקוון בכתובת www.samsung.com

סמלי אזהרה חשובים ואמצעי זהירות

משמעותם של הסמלים והסימנים המופיעים במדריך זה היא כדלקמן:

	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום פגיעה גופנית חמורה, מוות ו/או נזק לרכוש.
	סכנות או אופני שימוש לא בטיחותיים שעלולים לגרום פגיעה גופנית ו/או נזק לרכוש.
	כדי להקטין את הסיכון לשריפה, פיצוץ, התחשמלות או פציעה בזמן השימוש במכונת הכביסה, יש להקפיד ולשמור על אמצעי הזהירות הבסיסיים הבאים:
	אין לנסות.
	אין לפרק.
	אין לגעת.
	פעל בדיוק בהתאם להוראות.
	נתק את תקע החשמל מהשקע בקיר.
	ודא כי המכונה מוארקת כדי למנוע התחשמלות.
	פנה למרכז השירות לקבלת סיוע.
	הערה

סימני אזהרה אלה נועדו למנוע פגיעה בך ובאחרים.

אנא הקפד לציית להם.

לאחר שתקרא פרק זה, שמור אותו במקום בטוח לעין בשעת הצורך.

★ קרא את כל ההנחיות לפני השימוש במכשיר.

כמו בכל מכשיר הצורך חשמל ומכיל חלקים נעים, קיימות סכנות אפשריות. להפעלה בטוחה של המכשיר, עליך להכיר את אופן פעולתו ולנקוט אמצעי זהירות בעת השימוש בו.

אין לאפשר לילדים (או בעלי חיים) לשחק על, או בתוך מכונת הכביסה. דלת מכונת הכביסה אינה נפתחת בקלות מבפנים, וילדים עלולים להיפגע קשות אם שנלכדו בתוכה.

מכשיר חשמלי זה ניתן לשימוש בידי ילדים מגיל 8 ואילך, בידי מבוגרים עם יכולות פיזיות ומנטליות מוגבלות וגם בקרב אנשים שהחושים שלהם נפגעו וכן בקרב אנשים חסרי ניסיון או ידע, כל עוד ניתנו להם הנחיות לשימוש במכשיר החשמלי בצורה בטוחה או שהם תחת השגחה בעת שימוש במכשיר החשמלי והם מבינים את הסכנות הכרוכות בכך. אין לאפשר לילדים לשחק במכשיר החשמלי. אין לאפשר ניקוי ותחזוקה של המכשיר החשמלי בידי ילדים ללא השגחת מבוגר. יש להשגיח על ילדים ולוודא שהם אינם משחקים עם המכשיר.

במקרה של נזק לתקע כבל החשמל הוא יוחלף על ידי היצרן, נציג שירות מטעמו, או אדם אחר המוסמך לכך. אחרת קיימת סכנה לפגיעה גופנית או נזק.

יש למקם את מכונת הכביסה במקום ממנו יש גישות לשקע חשמל, ברזי מים וצינורות ניקוז. במכונת כביסה עם פתחי אוורור בתחתית, יש לוודא כי הפתח אינו חסום על-ידי שטיח או מכשול אחר.

יש להשתמש בערכת הצינורות החדשה בלבד. אין לעשות שימוש חוזר בערכת צינורות ישנה.

מידע בטיחות


אזהרות חשובות במיוחד לשלב ההתקנה



- ★ התקנת מוצר זה תתבצע רק על-ידי טכנאי מוסמך או חברת שירות.
- התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ, בעיות במוצר או פגיעה גופנית. המכשיר כבד, היזהר כאשר אתה מרים אותו
- חבר את כבל החשמל לשקע בקיר הפועל במתח של 220-240 וולט 50/AC הרץ ומעלה, והשתמש בשקע למכשיר זה בלבד. כמו כן, אל תשתמש בכבל מאריך.
- שימוש בשקע בקיר למספר מכשירים יחד באמצעות מפצל חשמל או על-ידי הארכת כבל החשמל עלול לגרום להתחשמלות או לשריפה.
- ודא כי מתח החשמל, התדר והזרם זהים לנתונים המצוינים במפרטי המוצר. אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה. חבר היטב את תקע החשמל לשקע בקיר.
- הקפד להסיר בקביעות כל גוף זר כגון אבק או מים מהמגעים ומנקודות חיבור החשמל בעזרת מטלית יבשה.
- נתק את כבל החשמל ונקה אותו בעזרת מטלית יבשה.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.
- חבר את תקע החשמל לשקע בקיר בכיוון הנכון כך שהכבל ישתלשל כלפי הרצפה.
- אם תחבר את תקע החשמל לשקע בכיוון ההפוך, עלול להיגרם נזק לגידי החשמל בתוך הכבל והדבר עלול לגרום להתחשמלות או לשריפה.
- שמור את כל חומרי האריזה הרחק מהישג ידם של ילדים, מאחר שחומרים אלה עלולים לסכן אותם.
- אם ילד מניח שקית מעל ראשו, הדבר עלול לגרום לחנק.
- אם נגרם נזק למכשיר, לתקע החשמל או לכבל החשמל, פנה למרכז השירות הקרוב.

- ⚡ על מכשיר זה להיות מוארק כהלכה.
- אין להאריך את המכשיר לצינור גז, צינור מים מפלסטיק או קו טלפון.
- פעולה זו עלולה לגרום להתחשמלות, שריפה, פיצוץ או בעיות במוצר.
- לעולם אל תחבר את כבל החשמל לשקע שאינו מוארק כהלכה, כמו כן ודא כי ההארקה מבוצעת בהתאם לחוקי המדינה והתקנות המקומיות.

- ☐ אל תתקין מכשיר זה בסמוך לגוף חימום או לחומר דליק.
- אל תתקין מכשיר זה במיקום לח, שומני או מאובק, או במקום החשוף לאור שמש ישיר ולמים (גשם).
- אל תתקין מכשיר זה במקום ששוררת בו טמפרטורה נמוכה.
- כפור עלול לגרום לצינורות להתפוצץ.
- אל תתקין מכשיר זה במיקום שבו עלולה להתרחש דליפת גז.
- הדבר עלול לגרום להתחשמלות או לשריפה.
- אל תשתמש בשנאי חשמלי.
- הדבר עלול לגרום להתחשמלות או לשריפה.
- אל תשתמש בתקע חשמל פגום, בכבל חשמל פגום או בשקע רופף בקיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.
- אל תמשוך או תכופף יתר על המידה את כבל החשמל.
- אל תעקם או תקשור את כבל החשמל.
- אל תתלה את כבל החשמל על חפץ ממתכת, אל תניח עליו חפץ כבד, אל תכניס את כבל החשמל בין עצמים ואל תדחוף את כבל החשמל לרווח שמאחורי המכשיר.
- הדבר עלול לגרום להתחשמלות או לשריפה.



אל תמשוך את כבל החשמל בעת ניתוק תקע החשמל מהקיר.

- נתק את תקע החשמל על-ידי אחיזה בתקע עצמו.
 - אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.
- אל תניח את כבל החשמל ואת הצינורות במקום שבו אתה עלול למעוד עליהם.

אמצעי זהירות לשלב ההתקנה

זהירות

יש למקם את המכשיר כך שיהיה נגיש לתקע החשמל.

- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.
- הצב את המכשיר על משטח ישר וקשיח שיכול לשאת את משקלו.
- אי ציות להנחיה זו עלול לגרום לרעידות חריגות, תזוזות, רעש, או בעיות במוצר.

אזהרות חשובות במיוחד לשלב השימוש

אזהרה

- אם מתרחשת הצפה במכשיר, נתק מייד את אספקת המים והחשמל ופנה אל מרכז השירות הקרוב.
- אל תיגע בתקע החשמל בידיים רטובות.
- אי ציות להנחיה זו עלול לגרום להתחשמלות.

אם בוקע מהמכשיר רעש מוזר, או אם עולה ממנו ריח של שריפה או עשן, נתק מייד את כבל החשמל ופנה אל מרכז השירות הקרוב.

- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.




במקרה של דליפת גז (כגון גז פרופן, גז בישול, וכדומה), אוורר מייד את האזור מבלי לגעת בתקע החשמל. אל תיגע במכשיר או בכבל החשמל.

- אל תשתמש במאוורר חשמלי.
- ניצוץ חשמלי עלול לגרום לפיצוץ או לשריפה.

אל תניח לילדים לשחק על מכונת הכביסה או בתוכה. כמו כן, בעת השלכת המכשיר, הסר את ידית הדלת של מכונת הכביסה.

- אם ילד נלכד בתוך המכשיר, הוא עלול להיחנק למוות.

הקפד להסיר את חומרי האריזה (ספוג, קלקר) בבסיס המארז של מכונת הכביסה לפני השימוש בה.



מידע בטיחות

-  אל תכבס פריטים שהתלכלכו בנפט, קרוסין, בנזן, מדלל צבע, אלקוהול או חומרים דליקים או נפיצים אחרים.
 - הדבר עלול לגרום להתחשמלות, לשריפה או לפיצוץ.
 - אל תנסה לפתוח בכוח את דלת מכונת הכביסה כאשר היא פועלת (שטיפה/ייבוש/סחיטה בטמפרטורה גבוהה).
 - מים שזורמים החוצה ממכונת הכביסה עלולים לגרום לכוויות או לרצפה חלקה.
 - הדבר עלול לגרום לפגיעה גופנית.
 - פתיחת הדלת בכוח עלולה לגרום נזק למוצר או פגיעה גופנית.
 - אל תכניס את ידך מתחת למכונת הכביסה.
 - הדבר עלול לגרום לפגיעה גופנית.
 - אל תיגע בתקע החשמל בידיים רטובות.
 - הדבר עלול לגרום להתחשמלות.
 - אל תכבה את המכשיר על-ידי ניתוק תקע החשמל בזמן שהמכשיר פועל.
 - החזרת התקע לשקע בקיר עלולה לגרום לניצוץ ובעקבותיו להתחשמלות או לשריפה.
 - אל תניח לילדים או לאנשים שבריאותם לקויה להשתמש במכונת הכביסה ללא פיקוח. אל תניח לילדים לטפס על המכשיר.
 - אי ציות להנחיה זו עלול לגרום להתחשמלות, לשריפה או לפגיעה גופנית.
 - אל תכניס יד או חפץ מתכתי מתחת למכונת הכביסה כאשר היא פועלת.
 - הדבר עלול לגרום לפגיעה גופנית.
 - אל תנתק את המכשיר על-ידי משיכת כבל החשמל. הקפד תמיד לאחוז היטב בתקע ולמשוך אותו ישירות מהשקע.
 - נזק לכבל עלול לגרום לקצר חשמלי, לשריפה ו/או להתחשמלות.
-
-  אל תנסה לנקות, לפרק או לשנות את המכשיר בעצמך.
 - אל תשתמש באף נתיך (כגון נחושת, תיל פלדה וכו') מלבד הנתיך הסטנדרטי.
 - לתיקון או התקנה מחדש של המכשיר, פנה אל מרכז השירות הקרוב.
 - התקנה בניגוד להנחיה זו עלולה לגרום להתחשמלות, שריפה, בעיות במוצר או פגיעה גופנית.
-
-  אם החיבור של צינור אספקת המים לברז המים מתרופף ומים מציפים את המכשיר, נתק את תקע החשמל.
 - אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.
 - נתק את תקע החשמל כאשר לא נעשה שימוש במכשיר למשך פרקי זמן ארוכים או במהלך סופת ברקים/רעמים.
 - אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

אמצעי זהירות לשלב השימוש



זהירות

- אם חודר למכונת הכביסה גוף זר כגון חומר ניקוי, לכלוך, שאריות מזון וכדומה, נתק את תקע החשמל ונקה את מכונת הכביסה באמצעות מטלית רכה ולחה.
- אי ציות להנחיה זו עלול לגרום לשינוי צבע, עיוות צורה, נזק או חלודה.
- מכה חזקה עלולה לשבור את הזכוכית הקדמית. היזהר בעת השימוש במכונת הכביסה.
- זכוכית שנשברה עלולה לגרום לפגיעה גופנית.
- לאחר כשל באספקת המים או בעת חיבור מחדש של צינור אספקת המים, פתח את ברז המים בזהירות. פתח את ברז המים בזהירות לאחר תקופה ארוכה שבה לא נעשה שימוש במכשיר.
- לחץ האוויר בצינור אספקת המים או בצינור המים עלול לגרום נזק לרכיבים או לנזילת מים.
- אם מתרחשת שגיאת ניקוז במהלך ההפעלה, בדוק אם קיימת בעיה בניקוז.
- אם נעשה שימוש במכשיר כאשר יש בו הצפה עקב בעיית ניקוז, הדבר עלול לגרום להתחשמלות או לשריפה עקב דליפת חשמל.
- הכנס את הכביסה לתוך המכונה כך שהכבסים לא ייתפסו בדלת.
- אם כבסים נתפסים בדלת, הדבר עלול לגרום נזק לכבסים או למכונת הכביסה, או לגרום לנזילת מים.
- ודא שברז המים סגור כשלא נעשה שימוש במכונת הכביסה.
- ודא שהבורג על המחבר של צינור אספקת המים מוברג היטב.
- אי ציות להנחיה זו עלול לגרום לנזק למוצר או לפגיעה גופנית.
- ודא שאטם הגומי וזוגיות הדלת הקדמית אינם מלוכלכים בחומרים זרים (כגון לכלוך, סיבי בד, שיער וכו').
- אם עצם זר נלכד בדלת או שהדלת אינה סגורה היטב, תיתכן דליפת מים.
- לפני השימוש במוצר, פתח את ברז המים ובדוק שהמחבר של צינור אספקת המים מהודק היטב ושאינ נזילת מים.
- אם הברגים או המחבר של צינור אספקת המים רופפים, הדבר עלול לגרום לנזילת מים.
- המוצר שרכשת מיועד לשימוש ביתי בלבד.
- שימוש למטרות עסקיות מוגדר כשימוש לא ראוי. במקרה זה, תפקע האחריית הרגילה שמספקת חברת סמסונג, וחברת סמסונג לא תישא באחריות לתקלות או לנזקים הנובעים משימוש לא ראוי כזה.

מידע בטיחות

- אל תעמוד על-גבי המכשיר ואל תניח חפצים (כגון כביסה, נרות דולקים, סיגריות דולקות, כלי שולחן, כימיקלים, חפצים מתכתיים וכו') על-גבי המכשיר.
- פעולה זו עלולה לגרום להתחשמלות, לשריפה, לבעיות במוצר, או לפגיעה גופנית.
 - אל תרסס חומר נדיף כגון מדביר חרקים על פני שטח המכשיר.
 - מלבד העובדה שהוא מזיק לבני אדם, הוא עלול לגרום גם להתחשמלות, לשריפה, או לבעיות במוצר.
 - אל תניח חפץ שיוצר שדה אלקטרומגנטי בקרבת מכונת הכביסה.
 - הדבר עלול לגרום לפגיעה גופנית בשל פעולה לא תקינה.
 - מאחר שהמים המתנקזים במהלך מחזור כביסה או ייבוש בטמפרטורה גבוהה הם חמים, אין לגעת במים.
 - הדבר עלול לגרום לכוויות או לפציעה.
 - אין לשטוף, לסחוט או לייבש מושבים, מרבדים או בגדים עמידים במים (*) אלא אם המכשיר כולל תוכנית מיוחדת לשטיפת פריטים מסוג זה.
 - אין לכבס מרבדים עבים וקשים אפילו אם על תווית הוראות הכביסה מופיע סימן של כביסה במכונה.
 - הדבר עלול לגרום לפגיעה גופנית או לנזק למכונת הכביסה, לקירות, לרצפה או לכבסים בשל רעידות חריגות.
 - * מצעים מצמר, כיסויי גשם, שכפייצים, מכנסי גלישה, שקי שינה, מגן פלסטיק לחיתולים, חליפות טריינינג וכיסויים לאופניים, אופנועים, כלי רכב וכו'.
 - אל תפעיל את מכונת הכביסה כאשר מגירת חומרי הכביסה אינה בתוכה.
 - הדבר עלול לגרום להתחשמלות או לפגיעה גופנית בשל נזילת מים.
 - אל תיגע בדפנות הפנימיים של התוף במהלך הייבוש או מייד בסיומו, מאחר שהן חמות.
 - הדבר עלול לגרום לכוויות.
 - אל תכניס את ידך למגירת חומרי הכביסה לאחר פתיחתה.
 - הדבר עלול לגרום לפגיעה גופנית משום שידך עלולה להיתפס בהתקן ההזנה של חומרי הכביסה. אל תניח חפץ כלשהו מלבד כביסה (כגון נעליים, שאריות מזון, חיות) בתוך מכונת הכביסה.
 - הדבר עלול לגרום לנזק למכונת הכביסה, או לפגיעה גופנית ולמוות במקרה של חיות מחמד עקב הרעידות החריגות.
 - אל תלחץ על הכפתורים באמצעות חפצים חדים כגון סיכות, סכינים, ציפורניים וכדומה.
 - הדבר עלול לגרום להתחשמלות או לפגיעה גופנית.
 - אל תכבס כביסה המוכתמת בשמנים, קרמים או משחות שנמכרים בדרך כלל במכוני קוסמטיקה או עיסוי.
 - הדבר עלול לגרום לעיוות של אטם הגומי ולנזילת מים.
 - אל תשאיר חפצים מתכתיים כגון סיכת ביטחון או סיכת ראש, או חומר מלבין בתוף המכונה למשך פרקי זמן ארוכים.
 - הדבר עלול לגרום לתוף להחליד.
 - אם סימני חלודה מתחילים להופיע על משטח התוף, שפוף עליו תכשיר ניקוי (נייטרלי) והשתמש בספוג לניקוי. לעולם אל תשתמש במברשת ברזל.
 - אין להשתמש ישירות בתכשיר לניקוי יבש ואין לכבס, לשטוף או לסחוט כביסה שעליה שאריות של תכשיר לניקוי יבש.
 - הדבר עלול לגרום לבעירה ספונטנית או להתלקחות בשל החום הנפלט כתוצאה מתהליך החמצון של השמן.
 - אל תשתמש במים חמים מהתקנים לקירור/חימום מים.
 - הדבר עלול לגרום לבעיות במכונת הכביסה.

אל תשתמש בסבון טבעי לכביסה ביד במכונת הכביסה.
- אם הוא יתקשה ויצטבר בתוך מכונת הכביסה, הוא עלול לגרום לבעיות במוצר, לשינוי צבע, לחלודה או לריח רע.

- אל תכבס פרטי כביסה גדולים כגון מצעים ברשת הכביסה.
- הכנס גרביים וחזיות לרשת הכביסה וכבס אותם עם שאר פרטי הכביסה.
- אי ציות להנחיה זו עלול לגרום לפגיעה גופנית בשל רעידות חריגות.
- אל תשתמש בחומרי כביסה שמתקשים.
- אם הם יצטברו בתוך מכונת הכביסה, עלולה להתרחש נזילת מים.
- במכונות כביסה עם פתחי אוורור בתחתית, יש לוודא כי הפתח אינו חסום על-ידי שטיח או מכשול אחר.
הקפד לרוקן את הכיסים בכל הבגדים המיועדים לכביסה.
- חפצים קשים וחדים כגון מטבעות, סיכות ביטחון, מסמרים, ברגים או אבנים עלולים לגרום למכשיר נזק משמעותי.
- אל תכבס בגדים בעלי אבזמים וכפתורים גדולים, או אביזרי מתכת כבדים אחרים.

אזהרות חשובות במיוחד לשלב הניקוי



- אל תנקה את המכשיר על-ידי התזת מים ישירות עליו.
אל תשתמש בתכשיר הניקוי המבוסס על חומצה מרוכזת.
אל תשתמש בבנזן, כוהל או חומר מדלל לניקוי המכשיר.
- הדבר עלול לגרום לשינוי צבע, עיוות צורה, נזק, התחשמלות או שריפה.
לפני ניקוי או פעולת תחזוקה, נתק את המכשיר מהשקע בקיר.
- אי ציות להנחיה זו עלול לגרום להתחשמלות או לשריפה.

תוכן עניינים

התקנת מכונת הכביסה

13

תכולת האריזה	13
תאימות לדרישות ההתקנה	14
אספקת חשמל והארקה	14
אספקת מים	14
ניקוז	15
משטח ההתקנה	15
טמפרטורת הסביבה	15
התקנה בגומחה או ארון	15
התקנת מכונת הכביסה	15

כביסה

21

כביסה ראשונה	21
הוראות בסיסיות	21
השימוש בלוח הבקרה	22
נעילת ילדים	25
כיבוי צלילים	25
Delay End (השהיית סיום)	26
My Cycle (התוכנית שלי)	26
Eco Bubble	27
כביסה בעזרת בורר תוכניות הכביסה	28
הגדרות כביסה ידניות	29
הנחיות לכביסה	29
מידע אודות אבקת/נוזל ותוספי כביסה	30
באיזה אבקת/נוזל כביסה להשתמש	30
מגירת אבקת/נוזל הכביסה	31
נוזל כביסה (בדגמים נבחרים)	31

ניקוי ותחזוקת מכונת הכביסה

32

ECO DRUM CLEAN (ניקוי תוף ידיות לסביבה)	32
ניקוז מכונת הכביסה במקרה חירום	33
ניקוי מסנן הפסולת	34
ניקוי חלקה החיצוני של מכונת הכביסה	34
ניקוי גומחת ומגירת אבקת/נוזל הכביסה	35
ניקוי מסנן הרשת של צינור המים	35
תיקון מכונת כביסה שקפאה	36
אחסון מכונת הכביסה	36

קודי מידע ואיתור ופתרון תקלות

37

קרא בעיון את הסעיפים הבאים אם מכונת הכביסה שלך...	37
קודי מידע	38

טבלת תוכניות הכביסה

39

טבלת תוכניות הכביסה	39
---------------------	----

נספח

40



טבלת טיפול בבדים	40
הגנת הסביבה	40
הצהרת תאימות	40
מפרט	41

התקנת מכונת הכביסה

כדי להבטיח שמכונת הכביסה תפעל כשורה וכי לא קיימת סכנה לפגיעה גופנית בשעת השימוש, וודא כי המתקין עוקב אחר ההוראות שלהלן.

תכולת האריזה

הוצא בזהירות את מכונת הכביסה מאריזתה וודא שכל החלקים שלהלן נמצאים. אם מכונת הכביסה ניזוקה ביזוקה במהלך התובלה, או אם חסרים חלקים כלשהם, צור קשר עם מרכז שירות הלקוחות של Samsung, או אם ספק Samsung ממנו נרכשה המכונה.

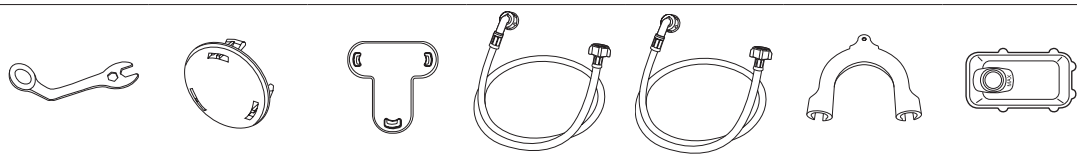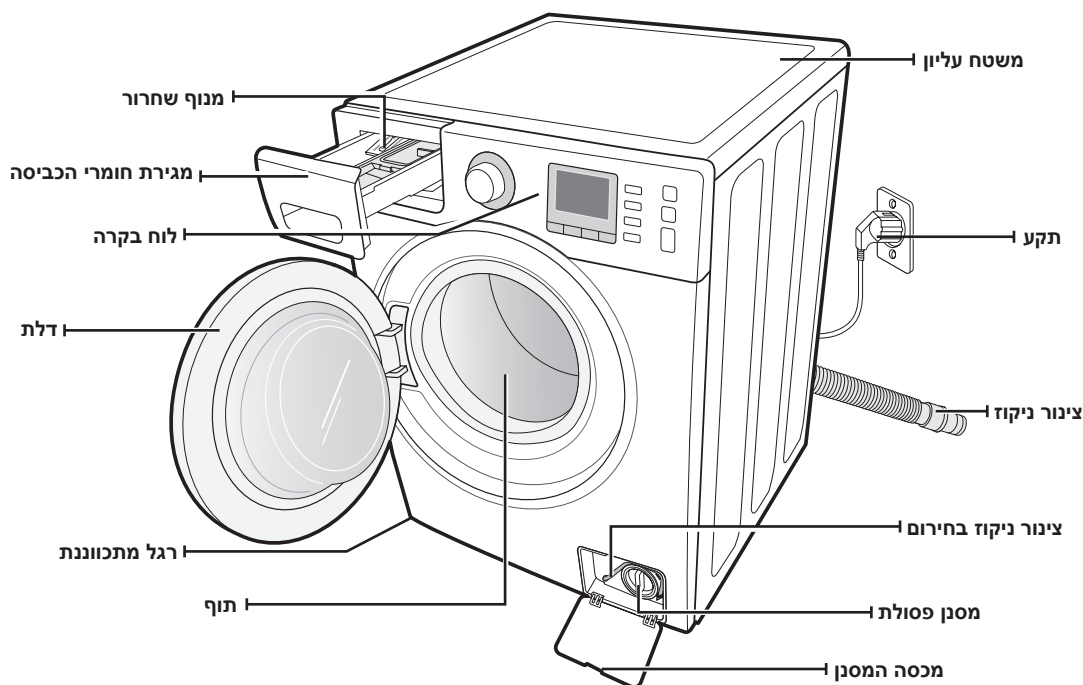

מפתח ברגים	*כיסויים לחורי הברגים	מכסה	צינור אספקת מים קרים	צינור אספקת מים חמים (בדגמים נבחרים)	תושבת הצינור	חוצץ נוזל הכביסה (בדגמים נבחרים)
צינור אספקת מים						

*כיסויים לחורי הברגים: מספר המכסים לחורי הברגים משתנה בהתאם לדגם (3~5 מכסים)

התקנת מכונת הכביסה

תאימות לדרישות ההתקנה

אספקת חשמל והארקה

 **אזהרה** אין להשתמש בכבל מאריך. יש להשתמש רק בכבל החשמל שסופק עם מכונת הכביסה.

לפני ההתקנה יש לוודא כי רשת החשמל שלך מספקת:

- נתיך או מפסק זרם 230V 50Hz 15 AMP
- ענף חשמל בודד המספק חשמל אך ורק למכונת הכביסה שלך

יש לוודא כי מכונת הכביסה מאורקת כנדרש. במקרה של תקלה במכונת הכביסה, ההארקה מצמצמת את הסכנה לשריפה והתחשמלות על ידי כך שהיא מהווה את הנתיב בעל ההתנגדות הנמוכה ביותר לזרם החשמל. מכונת הכביסה שלך מגיעה עם כבל חשמל בעל תקע מאורק עם שלוש שיניים אותו יש לחבר לשקע חשמל מאורק שהותקן כנדרש.

 אין לחבר את ההארקה לצנרת פלסטיק, צינורות גז, או צינורות מים חמים.

חיבור לא תקין של המוליך להארקת הציוד עלול לגרום להתחשמלות.

אם אינך בטוח אם מכונת הכביסה מוארקת כהלכה, התייעץ עם חשמלאי או עם איש שירות מוסמך. אל תשנה את התקע המצורף למכונת הכביסה. אם הוא אינו תואם לשקע, בקש מחשמלאי מוסמך להתקין במקומו שקע מתאים.

אספקת מים

מכונת הכביסה מתמלאת כהלכה כאשר לחץ המים הוא 50kPa ~ 800kPa. לחץ מים קטן מ-50kPa עלול לגרום לכך ששסתום המים לא ייסגר באופן הרמטי, ובכך עלול לגרום לכשל בפעולתו. לחילופין, יתכן שיידרש זמן רב יותר מהזמן אותו מתירות הבקורות למילוי המכונה, וכתוצאה מכך המכונה תכבה. (מגבלת הזמן למילוי המובנית בבקורות מכונת הכביסה, מיועדת למנוע מילוי יתר/הצפה במקרה שאחד מהצינורות הפנימיים משתחרר.)

על ברזי המים להימצא במרחק של 120 ס"מ מחלקה האחורי של מכונת הכביסה, כדי לאפשר את חיבורה לאספקת המים באמצעות הצינורות המסופקים.

 רוב החנויות לציוד בניין ואינסטלציה מוכרות צינורות אספקת מים באורכים של עד 305 ס"מ.

ניתן לצמצם את הסיכון לדליפות ונזק ממים על ידי:

- נגישות קלה לברזי המים.
- סגירת ברזי המים כאשר מכונת הכביסה אינה בשימוש.
- בדיקה תקופתית לאיתור דליפות בנקודות החיבור של צינור המים.

לפני השימוש במכונת הכביסה בפעם הראשונה, בדוק את כל חיבורי שסתום המים והברזים לאיתור דליפות.  **אזהרה** דליפות.

ניקוז

Samsung ממליצה על צינור זקוף בגובה 65 ס"מ. על צינור הניקוז להיות מנותב דרך תפס צינור הניקוז, אל הצינור הזקוף. על הצינור הזקוף להיות גדול מספיק כדי להכיל את קוטרו החיצוני של צינור הניקוז. צינור הניקוז מגיע כשהוא מחובר.

משטח ההתקנה

לביצועים הטובים ביותר יש למקם את מכונת הכביסה על רצפה יציבה. יתכן שיהיה צורך לחזק רצפות עץ כדי למזער את הרעידות ו/או חוסר האיזון בנשיאת משקלה של מכונת הכביסה. שטיחים ואריחים רכים הם חלק מהגורמים התורמים לרעידות ולנטייה של מכונת הכביסה לזוז מעט בזמן הסחיטה.

אין להתקין את מכונת הכביסה על משטח מוגבה, או על משטח שאינו מעניק תמיכה מספקת

טמפרטורת הסביבה

אין להתקין את מכונת הכביסה באזורים בהם יתכן שהמים יקפאו. מכיוון שמכונת הכביסה מכילה תמיד כמות מסוימת של מים בשסתום המים, במשאבה ובצינורות, מים קפואים עלולים לגרום נזק לחגורה, משאבה ורכיבים נוספים.

התקנה בגומחה או ארון

לפעילות בטוחה ותקינה, יש צורך לשמור על המרווחים הבאים בין מכונת הכביסה והקירות שמסביבה:

מרווח צידי – 25 מ"מ	מרווח אחורי – 50 מ"מ
מרווח עליון – 25 מ"מ	מרווח קדמי – 465 מ"מ

כאשר מכונת ומייבש כביסה מותקנים ביחד, יש לוודא כי קיים פתח אוורור שגודלו 465 מ"מ לפחות, בפתח/דלת הגומחה או הארון. מכונת הכביסה לבדה אינה מצריכה פתח אוורור.

התקנת מכונת הכביסה

שלב 1

בחירת מיקום

לפני התקנתה של מכונת הכביסה וודא כי המיקום שבחרת:



- הינו משטח יציב ומישורי ללא שטיח או ריצוף שיחסמו את פתחי האוורור
- אינו חשוף לאור שמש ישיר
- מאפשר אוורור נאות
- הטמפרטורה אינה צונחת מתחת לנקודת הקיפאון (מתחת ל-0°C)
- מרוחק ממקורות חום כגון, נפט או גז
- מרווח מספיק כדי שמכונת הכביסה לא תעמוד על כבל החשמל שלה


התקנת מכונת הכביסה

שלב 2


הסרת בורגי התובלה

לפני התקנת מכונת הכביסה, עליך להסיר את כל בורגי ההובלה מגב היחידה.


1. שחרר את כל הברגים בעזרת מפתח הברגים המסופק.

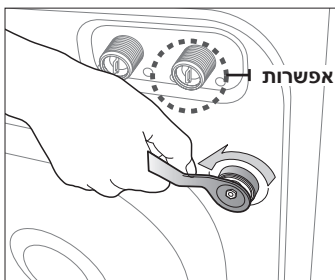

2. אחוז בבורג בעזרת מפתח הברגים ומשוך אותו דרך חלקו הרחב של החור. חזור על התהליך שלעיל עבור כל אחד מהברגים.

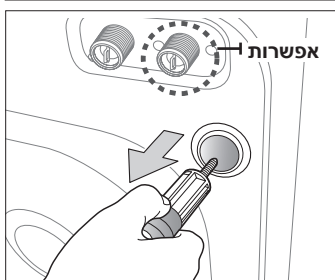

3. סתום את החורים בעזרת כיסויי החורים המסופקים.

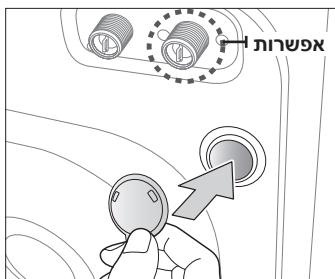


4. אחסן את בורגי התובלה במקום בטוח למקרה שתרצה להוביל את מכונת הכביסה בעתיד.
חומרי האריזה עלולים להיות מסוכנים לילדים. יש לשמור את חלקי האריזה (שקיות פלסטיק, קלקר וכו') הרחק מהישג ידם של ילדים.  אזהרה

שלב 3

התאמת גובה הרגל


במהלך התקנתה של מכונת הכביסה וודא כי תקע החשמל, ברזי אספקת המים ופתח הניקוז נגישים בקלות. 

1. החלק את מכונת הכביסה למקומה.

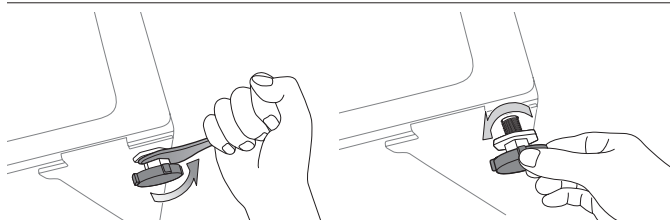

2. אזן את מכונת הכביסה באמצעות סיבוב ידני של הרגל פנימה והחוצה עד להגעה לתוצאה הרצויה.

3. כאשר מכונת הכביסה מאוזנת, חזק את האומים באמצעות מפתח הברגים המצורף.

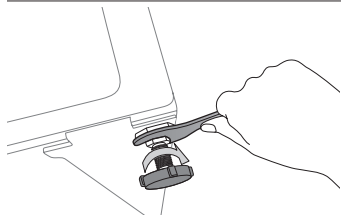


שלב 4

חיבור ברזי המים והניקוז

חיבור צינור אספקת המים

1. חבר את המתאם בצורת האות L של צינור אספקת המים הקרים אל חיבור כניסת המים הקרים בחלקה האחורי של מכונת הכביסה. הברג וחזק בעזרת היד קצה אחד של צינור אספקת המים יש לחבר למכונת הכביסה, ואת קצהו השני יש לחבר לברז המים. אין למתוח את צינור אספקת המים. אם הצינור קצר מדי, החלף אותו בצינור לחץ גבוה ארוך יותר. 

2. חבר את קצהו השני של צינור אספקת המים הקרים לברז המים הקרים שבכיוור. הברג וחזק בעזרת היד. במידת הצורך, ניתן למקם מחדש את צינור אספקת המים בחלקה האחורי של מכונת הכביסה. כדי לעשות זאת שחרר את המתאם, סובב את הצינור וחזק את המתאם בחזרה.

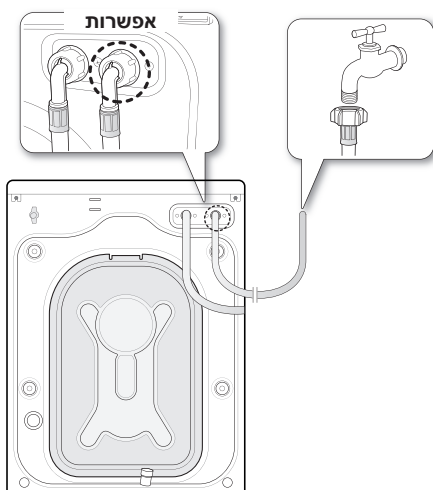


עבור דגמים נבחרים עם פתח כניסת מים חמים:

1. חבר את המתאם בצורת האות L של צינור אספקת המים החמים אל חיבור כניסת המים החמים בחלקה האחורי של מכונת הכביסה. הברג וחזק בעזרת היד.
2. בר את קצהו השני של צינור אספקת המים החמים לברז המים החמים שבכיוור. הברג וחזק בעזרת היד.
3. השתמש בחיבור בצורת האות Y אם ברצונך להשתמש רק במים קרים.


התקנת מכונת הכביסה

חיבור צינור אספקת המים


1. הסר את המתאם מצינור אספקת המים.

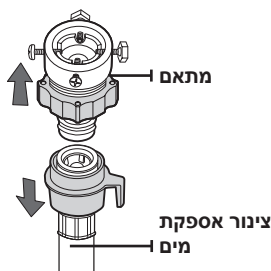

2. תחילה, באמצעות מברג מסוג '+', שחרר את ארבעת הברגים שעל המתאם. לאחר מכן קח את המתאם וסובב את הטבעת (2) עם כיוון החץ עד אשר נוצר מרווח של 5 מ"מ

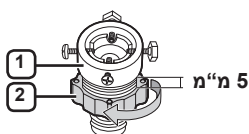


3. חבר את המתאם לברז המים על ידי הידוק הברגים בחוזקה תוך כדי הרמת המתאם כלפי מעלה. סובב את הטבעת (2) עם כיוון החץ, וחבר את (1) ו-(2).

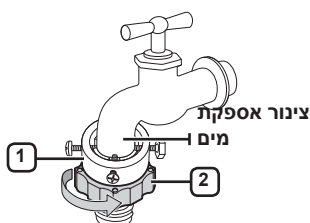



4. חבר את צינור אספקת המים אל המתאם. כאשר תשחרר את חלק (3) הצינור יתחבר אוטומטית למתאם וישמיע צליל 'נקישה'.

לאחר חיבורו של צינור אספקת המים למתאם, וודא כי הצינור מחובר בצורה תקינה על ידי משיכתו כלפי מטה.

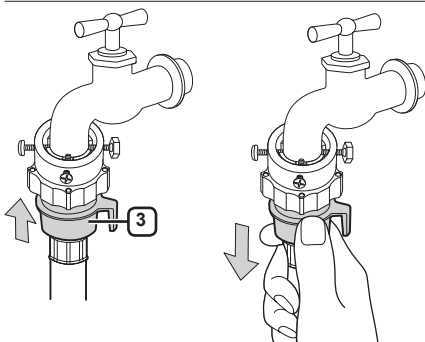


5. חבר את קצהו השני של צינור אספקת המים לשסתום כניסת המים בחלקה האחורי של מכונת הכביסה. הברג את הצינור כנגד כיוון השעון ובמלואו.

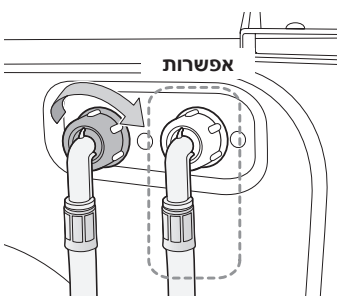

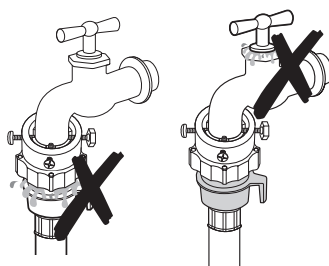


6. פתח את ברז אספקת המים וודא כי אין דליפות מים מהשסתום, הברז או המתאם. במקרה של דליפת מים, חזור שנית על השלבים שלעיל. אין להפעיל את מכונת הכביסה במקרה של דליפת מים. תתכן סכנת התחשמלות או פציעה.  אזהרה

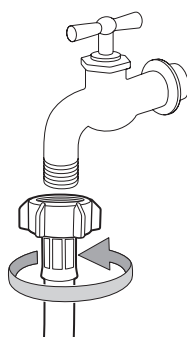

- אם קצחו של ברז המים מכיל הברגה, חבר את צינור אספקת המים אל הברז כפי שמוצג בתרשים.

השתמש בברז מהסוג השגרתי ביותר. אם הברז מרובע או גדול מדי, הסר את טבעת הריווח לפני הכנסת הברז למתאם. 

חיבור צינור ספיגת המים (בדגמים נבחרים)

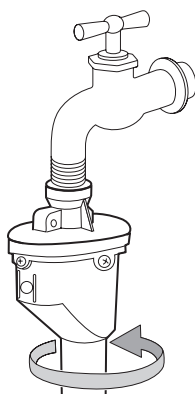


- צינור ספיגת המים תוכנן להגנה מושלמת מפני נזילות. הוא מחובר לצינור אספקת המים ומנתק באופן אוטומטי את זרם המים במקרה של נזק לצינור. כמו כן, הוא מציג חיווי אזהרה.
- חבר את צינור אספקת המים לברז כמוצג באיור.

התקנת מכונת הכביסה


חיבור צינור הניקוז

את קצהו של צינור הניקוז ניתן למקם בשלוש דרכים שונות:

1. **מעל דופן כיור רחצה:** יש להניח את צינור הניקוז בגובה של בין 60 ל-90 ס"מ כדי לשמור על פיה מעוקלת של צינור הניקוז, השתמש במוביל הצינור מפלסטיק המצורף למכונה. חזק את המוביל אל הקיר בעזרת וו או אל הברז בעזרת פיסת חוט כדי למנוע תזוזה של צינור הניקוז.

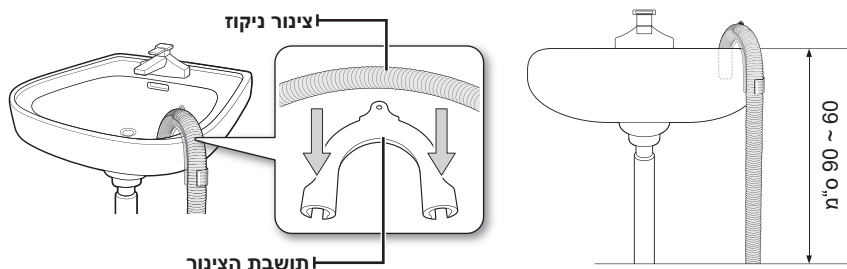

2. **במסעף צינור הניקוז בכיור:** על מסעף צינור הניקוז להיות מעל סיפון הכיור, כך שקצה הצינור "מצא לפחות 60 ס"מ מעל הרצפה.
3. **בצינור ניקוז:** אנו ממליצים על שימוש בצינור אנכי בגובה 65 ס"מ; על אורך הצינור להיות בין 60 ל-90 ס"מ.

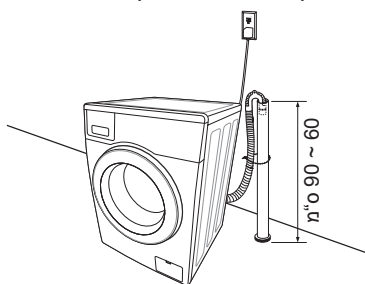

דרישות צינור הניקוז האנכי:

- קוטר מינימלי של 5 ס"מ.
- ספיקה מינימלית של 60 ליטרים לדקה.

שלב 5

הפעלת מכונת הכביסה

חבר את כבל החשמל לשקע חשמל מאושר של 220-240 וולט 50/AC הרץ בקיר, המוגן על-ידי נתיך או מפסק פחת. (לפרטים נוספים אודות דרישות החשמל וההארקה, פנה לעמוד 14).

בדיקת הרצה

הקפד להתקין את מכונת הכביסה בצורה נאותה ולהפעיל את תוכנית **שטיפה+סחיטה** בסיום ההתקנה.

שלב 6

מצב כיוול


מכונת הכביסה של Samsung מזהה את משקל הכביסה באופן אוטומטי. לזיהוי משקל מדויק יותר, הפעל את המצב כיוול (Calibration) לאחר התקנת המכונה. פעל על-פי ההוראות הבאות כדי לכייל את המכונה.

1. הסר את הכביסה ואת כל הפריטים האחרים שבתוך המכונה וכבה אותה.
2. לחץ במקביל על הלחצנים **Temp** (טמפרטורה), **Delay End** (השהיית סיום) והלחצן **Power** (הפעלה/כיבוי). המכונה תופעל.
3. לחץ על הלחצן **Start** (התחלה) כדי להיכנס למצב כיוול.
4. התוף יסתובב עם כיוון השעון וכנגד כיוון השעון במשך 3 דקות בקירוב.
5. בסיום, הכיתוב **END** (סיום) יוצג על הצג והמכונה תכבה באופן אוטומטי. מכונת הכביסה מוכנה עכשיו לשימוש.

כביסה

החלק הקשה ביותר בשימוש במכונת הכביסה החדשה שלך מבית Samsung, הוא קבלת ההחלטה איזו מערימות כביסה לכבס קודם לכן.

כביסה ראשונה

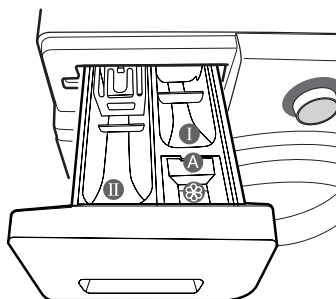

לפני הכביסה הראשונה יש להפעיל תוכנית כביסה מלאה כשהמכונה ריקה.

1. לחץ על הכפתור **Power** (הפעלה/כיבוי).
 2. הוסף מעט אבקת/נוזל כביסה לתא אבקת/נוזל הכביסה II שבמגירת אבקת/נוזל הכביסה.
 3. פתח את ברזי אספקת המים של מכונת הכביסה.
 4. לחץ על הכפתור **Start/Pause** (התחלה/השהייה).
- זאת לצורך ניקוז כל שאריות המים שייתכן ונשארו לאחר הרצת המבחן של היצרן.

תא ①: חומר כביסה לשטיפה מוקדמת, או עמילן.
תא ②: אבקת כביסה לשטיפה העיקרית, מרכז מים, חומר להשרייה מוקדמת, חומרי הלבנה והסרת כתמים.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עין בעמוד 31 במדריך לאיתור הדגם המתאים). אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.


תא ☼: תוספים, כגון, מרכז כביסה (בשעת המילוי יש להקפיד לא לחרוג מהגובה המקסימאלי המסומן MAX-ב על התא "A")

הוראות בסיסיות

1. הכנס את הכביסה למכונת הכביסה.
אין לטעון כמות גדולה מדי של כביסה למכונת הכביסה. כדי לקבוע את קיבולת המכונה עבור כל אחד מסוגי הכביסה, פנה לטבלה שבמסמך 30.
- וודא כי הכבסים לא נתקעו בדלת המכונה. הדבר עלול גרום לדליפת מים.
• עם סיומה של תוכנית הכביסה יתכן שיוותרו שאריות של אבקת/נוזל כביסה בחלקה הקדמי העשוי גומי. יש להסיר את שאריות אבקת/נוזל הכביסה הללו מכיוון שהן עלולות לגרום לדליפת מים.
• אל תיגע בזכוכית הדלת הקדמית כאשר מכונת הכביסה פועלת, שכן היא עלולה להיות חמה.
• אל תפתח את מגירת חומרי הכביסה או את מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן אתה עלול לבוא במגע עם מים חמים או קיטור.
• אל תכבס פריטים עמידים במים בתוכנית כביסה רגילה, רק בתוכנית Outdoor Care (בגדי טיול ועבודה).
2. סגור את הדלת עד שהיא ננעלת במקומה.
3. הפעל את המכונה.
4. הוסף אבקת כביסה ותוספים למגירה.
5. בחר את התוכנית והאפשרויות המתאימות לסוג הכביסה.
מחון הכביסה יאיר וזמן התוכנית המשוער יוצג על התצוגה.
6. לחץ על הכפתור **Start/Pause** (התחלה/השהייה).

כביסה

השימוש בלוח הבקרה

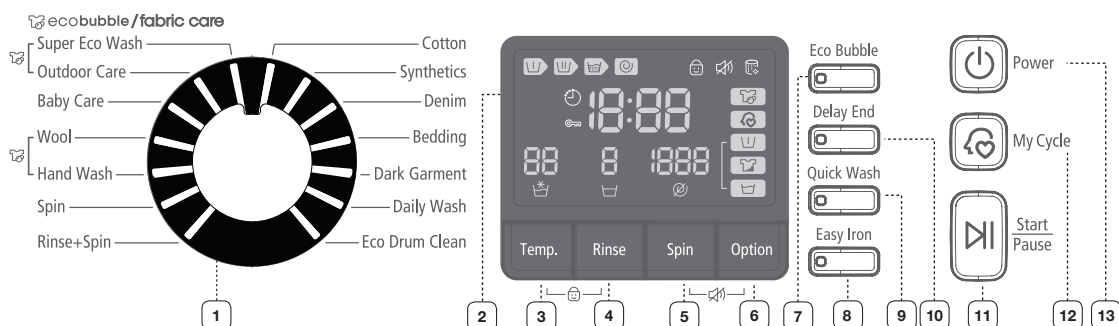

בחר את מאפייני הכביסה ומהירות הסחיטה.

Cotton (כותנה) - לדרגת לכלוך נמוכה או בינונית של בדי כותנה, מצעים, מפות שולחן, ביגוד תחתון, מגבות, חולצות וכו'.
Synthetics (סינתטי) - לדרגת לכלוך נמוכה או בינונית של חולצות ופריטים נוספים העשויים מפוליאסטר (דיאולן, טרוויר), פוליאמיד (פרלון, נילון) או תרכובות דומות אחרות.

Denim (אריג גס) - מפלס מים גבוה יותר בשלב השטיפה העיקרית ושטיפות נוספות מבטיחים סילוק של כל שאריות אבקת הכביסה מהבגדים.
Bedding (מצעים) - לכיסויי מיטה, סדינים, ציפות וכדומה.

כדי להשיג את התוצאות הטובות ביותר, אל תכבס יותר מ-2.5 ק"ג ו/או יותר מסוג אחד של מצעים.

Dark Garment (בגדים כהים) - שטיפות נוספות ומהירות סחיטה פחותה מבטיחות כי הבגדים הכהים האהובים עליך יעברו כביסה עדינה ושטיפה יסודית.
Daily Wash (כביסה יומית) - כביסה לפריטים יומיומיים כגון לבנים וחולצות.
Eco Drum Clean (ניקוי תוף ידידותי לסביבה) - תוכנית לניקוי התוף. כוללת הסרת לכלוך וחידוד מהתוף. מומלץ להשתמש בקביעות (לאחר כל 40 כביסות). אין צורך בחומר ניקוי או הלבנה.

Super Eco Wash (כביסה חסכונית במיוחד) - פונקציית Eco Bubble בטמפרטורה נמוכה מבטיחה כי תקבל תוצאות כביסה מושלמות תוך חיסכון ויעילות בצריכת אנרגיה.

Outdoor Care (בגדי טיול ועבודה) - כביסה לביגוד שטח כגון בגדי טיפוס, חליפות סקי וביגוד ספורטיבי. מיועד לבדים עם גימור בטכנולוגיה פונקציונלית וסיבים סינטטיים כגון ספנדקס, סיבים נמתחים ומיקרופיבר.

Baby Care (בגדי תינוקות) - טמפרטורת כביסה גבוהה ושטיפות נוספות מבטיחות שלא יישארו שאריות אבקת כביסה שיכתימו את הבגדים הדקים שלך.

Wool (צמר) - רק עבור פריטי צמר הניתנים לכביסה במכונה. משקל הכבסים לא יעלה על 2 ק"ג.

- בתוכנית הצמר פעולת הכביסה מבוצעת באמצעות תנועות ערסול עדינות. במהלך השטיפה, תנועות הערסול וההשרייה העדינות נמשכות כדי להגן על סיבי הצמר מפני התכווצות / עיוות צורה ולניקוי עדין במיוחד. ניתן בקלות לעצור את הפעולה בתוכנית זו.


- בתוכנית הצמר מומלץ להשתמש באבקת כביסה עדינה, לתוצאות כביסה משופרות ולשמירה טובה יותר על סיבי הצמר.

Hand Wash (כביסה ידינית) - מחזור כביסה קל ביותר, עדין ככביסה ידינית.


Spin (סחיטה) - ביצוע סחיטה נוספת להסרת כמויות גדולות יותר של מים.

Rinse + Spin (שטיפה + סחיטה) - לפריטים הזקוקים לשטיפה בלבד, או כדי להוסיף מרכז כביסה בשטיפה.

1 בורר תוכנית הכביסה



מציגה את הזמן שנותר עד לסיום תוכנית הכביסה, את כל המידע אודות תוכנית הכביסה והודעות שגיאה.	2 תצוגה גראפית דיגיטאלית
לחץ על הכפתור לסירוגין כדי לעבור בין אפשרויות טמפרטורת המים הזמינות: (מים קרים, 95°C, 60°C, 40°C, 30°C, 20°C)	3 TEMP (טמפרטורה) כפתור בחירה
לחץ על כפתור זה להוספת עוד מחזורי שטיפה. מספר מחזורי השטיפה המרבי הוא חמישה.	4 RINSE (שטיפה) כפתור בחירה
לחץ על הכפתור לסירוגין כדי לבחור את מהירות הסחיטה מבין האפשרויות הזמינות.	5 SPIN (סחיטה) כפתור בחירה
WF906U4/WF806U4 “ללא סחיטה” - הכביסה נשארת בתוף וללא תוכנית סחיטה לאחר הניקוז הסופי. “עצור לאחר שטיפה” - הכביסה נשארת מושרית במי השטיפה. לפני שניתן להוציא את הכביסה מהמכונה צריך להתבצע צריך Drain (ניקוז) או Spin (סחיטה).	
לחץ על כפתור זה לסירוגין כדי לעבור בין אפשרויות השטיפה: השריה → שטיפה מוגברת → שטיפה מוקדמת → השריה + שטיפה מוגברת → השריה + שטיפה מוקדמת → שטיפה מוגברת + שטיפה מוקדמת → השריה + שטיפה מוגברת + שטיפה מוקדמת → כיבוי “שטיפה מוקדמת”. לחץ על כפתור זה כדי לבחור בשטיפה מוקדמת. שטיפה מוקדמת זמינה רק בתוכניות: Cotton (כותנה), Synthetics (סינתטי), Denim (אריג), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Super Eco Wash (כביסה חסכונית במיוחד), Baby Care (בגדי תינוקות). “השריה” - השתמש באפשרות זאת כדי להסיר ביעילות כתמים באמצעות השרייתם של הכביסה. - ההשריה מתבצעת 13 דקות לאחר תחילתה של תוכנית הכביסה. - ההשריה אורכת 30 דקות, בשישה מחזורים. כל מחזור מורכב מסחיטה במשך דקה אחת והשריה במשך 4 דקות. - פונקציית ההשריה זמינה רק עם תוכניות הכביסה: Cotton (כותנה), Synthetics (סינתטי), Denim (אריג), Bedding (מצעים), Daily Wash (כביסה רגילה), Super Eco Wash (כביסה חסכונית במיוחד), Baby Care (בגדי תינוקות). “שטיפה מוגברת” - יוש לכבסה בצורה נמרצת. אורכה של כל אחת מתוכניות הכביסה מתארך בהתאם.	6 OPTION (אפשרויות כביסה) כפתור בחירה
הבחירה ב-Eco Bubble מופעלת כברירת מחדל. לחץ על כפתור האפשרות Eco Bubble פעם אחת כדי לבטל את הבחירה ולכבות את יוצר הבועות (מוצג על-גבי הלוח), לחץ עליו שוב כדי לחזור ולהפעיל את הפונקציה. - בחלק מתוכניות הכביסה חובה להפעיל את האפשרות Eco Bubble (הדבר יוצג על-גבי הלוח ויוצר הבועות יופעל באופן אוטומטי). - תוכניות כביסה אחרות אינן זקוקות לאפשרות זו ומכבות את יוצר הבועות באופן אוטומטי. - בתוכניות רבות, ניתן לכוון אפשרות זו באופן ידני, דבר שיפיע בצורה ברורה על משך הזמן הנותר לסיום מחזור הכביסה המוצג על-גבי הלוח (ראה עמוד 27 לקבלת מידע נוסף).	7 ECO BUBBLE כפתור בחירה
לחץ על כפתור זה כדי להפחית את היווצרות הקמטים בזמן הסחיטה לצורך גיהוץ קל. - Easy Iron (גיהוץ קל) זמינה רק עם תוכניות הכביסה הבאות: Cotton (כותנה), Synthetics (סינתטי), Denim (אריג), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Super Eco Wash (כביסה חסכונית במיוחד), Baby Care (בגדי תינוקות). - כאשר נבחרת האפשרות “גיהוץ קל”, תוכל לקבוע את מהירות הסחיטה עד לערך של 800 סל"ד. (אם תבחר באפשרות Easy Iron (גיהוץ קל) עם מהירות סחיטה גבוהה מ-800 סל"ד, מהירות הסחיטה תשתנה אוטומטית ל-800 סל"ד).	8 EASY IRON (גיהוץ קל) כפתור בחירה



כביסה

לבגדים בדרגת לכלוך קלה, במשקל של עד 2 ק"ג, הדרושים לך במהירות. התוכנית נמשכת כ-15 דקות לכל הפחות, אך פרק זמן זה עשוי להשתנות מהערך שצוין בהתאם ללחץ המים, רמת הקושי של המים, הטמפרטורה של פתח כניסת המים, טמפרטורת החדר, סוג וכמות הכביסה ודרגת הלכלוך, סוג אבקת הכביסה, משקל לא מאוזן של הכביסה במכונה, תנודות באספקת החשמל ואפשרויות נוספות שנבחרות. • לחץ על כפתור זה מספר פעמים כדי לבחור את משך המחזור: 15 דק' ← 20 דק' ← 30 דק' ← 40 דק' ← 50 דק' ← 1 שעה ← כיבוי ⚠ כדי להבטיח סילוק של כל שאריות חומרי הכביסה מהבגדים, אין להוסיף יותר מ-20 גר' אבקה או נוזל כביסה (למשקל כביסה של 2 ק"ג).	QUICK WASH (כביסה מהירה) כפתור בחירה 9
לחץ על הכפתור לסירוגין כדי לעבור בין אפשרויות Delay End (השהיית סיום) הזמינות (מ-3 עד 19 שעות במדרגות של שעה). השעה המוצגת מציינת את הזמן בו תסתיים תוכנית הכביסה.	DELAY END (השהיית סיום) כפתור בחירה 10
לחץ כדי להשהות, ולחזור ולהפעיל את התוכנית.	START/PAUSE (התחלה/השהייה) כפתור בחירה 11
בחר את התוכנית המועדפת עליך כולל טמפרטורה, מהירות סחיטה, דרגת לכלוך, אפשרויות ועוד.	My Cycle כפתור (התוכנית שלי) 12
לחץ על הכפתור פעם אחת כדי להפעיל את מכונת הכביסה ופעם נוספת כדי לכבותה. אם הפעלת את מכונת הכביסה ולא לחצת על אף אחד מכפתוריה, היא תכבה אוטומטית לאחר 10 דקות.	POWER (הפעלה/כיבוי) כפתור 13


נעילת ילדים

אפשרות Child Lock (נעילת ילדים) מאפשרת לנעול את כפתורי המכונה כך שלא ניתן לשנות את תוכנית הכביסה שבחרת.

הפעלה/נטרול

אם ברצונך להפעיל את אפשרות "נעילת הילדים" לחץ במקביל על הכפתורים **Temp** (טמפרטורה) ו- **Rinse** (שטיפה) למשך 3 שניות. המחווה "Child Lock (נעילת ילדים)" יאיר כאשר אפשרות זו הופעלה.

לאחר שהופעלה Child Lock (נעילת הילדים) ניתן להשתמש רק בכפתור **Power** (הפעלה/כיבוי). Child Lock (נעילת הילדים) נשארת פעילה אפילו לאחר שמכונת הכביסה הופעלה וכונתה, וכבל החשמל נותק וחובר מחדש.

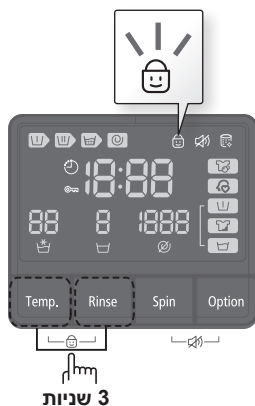


כיבוי צלילים

ניתן לבחור בפונקציה 'כיבוי צלילים' בכל התוכניות. כאשר פונקציה זו נבחרת, הקול נכבה עבור כל התוכניות. גם לאחר שמכבים ומפעילים את המכונה מספר פעמים, הגדרה זו נשמרת.

הפעלה/נטרול

אם ברצונך להפעיל או להשבית את הפונקציה 'כיבוי צלילים', לחץ על הכפתורים **Spin** (סחיטה) ו- **Option** (אפשרויות כביסה) בו-זמנית במשך 3 שניות. המחווה "כיבוי צלילים" יאיר כאשר אפשרות זו הופעלה.

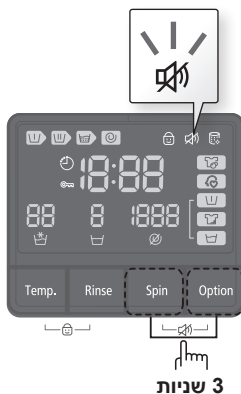

Delay End (השהיית סיום)

- ניתן להגדיר את מכונת הכביסה לסיום הכביסה באופן אוטומטי במועד מאוחר יותר, על-ידי בחירת השהייה של בין 3 ל-19 שעות (במרווחים של שעה אחת). השעה המוצגת מציינת את שעת סיום תוכנית הכביסה.
1. הגדר את מכונת הכביסה ידנית או אוטומטית בהתאם לסוג הכביסה.
 2. לחץ על הכפתור **Delay End (השהיית סיום)** לסירוגין עד שתגיע לזמן הרצוי.
 3. לחץ על הכפתור **Start/Pause (התחלה/השהייה)**. המחווה "Delay End (השהיית סיום)" יאיר והשעון יתחיל לספור לאחר עד שיגיע לזמן שהוגדר.
 4. כדי לבטל את אפשרות Delay End (השהיית הסיום) לחץ על הכפתור **Power (הפעלה/כיבוי)** ולאחר מכן הפעל מחדש את מכונת הכביסה.

My Cycle (התוכנית שלי)

- מאפשרת לך להפעיל תוכנית כביסה בהתאמה אישית (טמפרטורה, מהירות סחיטה, דרגת כלוך וכדומה) בלחיצת כפתור אחת.
- לחיצה על כפתור **My Cycle (התוכנית שלי)**, טוענת את האפשרויות של כפתור My Cycle (התוכנית שלי) ומשתמשת באפשרויות השמורות של My Cycle (התוכנית שלי). הנורית "My Cycle (התוכנית שלי)" תציין כי האפשרות מופעלת. בנוסף, יבהבו המריות של התוכנית והאפשרויות שנבחרו.
- במצב My Cycle (התוכנית שלי) ניתן להגדיר את כל האפשרויות הבאות.
1. פתח את ברז אספקת המים.
 2. לחץ על הכפתור **Power (הפעלה/כיבוי)**.
 3. לבחור תוכנית באמצעות **בורר התוכניות**.
 4. לאחר בחירת התוכנית, להגדיר כל אפשרות.
-  ראה את "טבלת התוכניות" בעמי 39 להגדרות האפשרויות הזמינות בכל תוכנית.
5. לאחר מכן ניתן לשמור בזיכרון את התוכנית והאפשרויות שנבחרו על-ידי לחיצה ממושכת על כפתור **My Cycle (התוכנית שלי)** במשך יותר מ-3 שניות במצב My Cycle (התוכנית שלי). התוכנית My Cycle (התוכנית שלי) והאפשרויות שתבחר יוצגו בפעם הבאה שתבחר בפונקציית My Cycle (התוכנית שלי).
-  ניתן לשנות את הגדרות My Cycle (התוכנית שלי) על-ידי חזרה על התהליך שתואר לעיל. ההגדרה האחרונה שנקבעה תוצג בפעם הבאה שתבחר בפונקציית My Cycle (התוכנית שלי).
-  אם תלחץ על כפתור My Cycle (התוכנית שלי) ותרפה בתוך 3 שניות, יופיעו התוכנית והאפשרויות שנשמרו לאחרונה. אם תלחץ ממושכות על My Cycle (התוכנית שלי) במשך למעלה מ-3 שניות, התוכנית והאפשרויות המוגדרות כעת יישמרו והנורית תבהב במשך 3 שניות.

Eco Bubble

הודות ל-Eco Bubble חומרי הכביסה מתפזרים בצורה שווה וחודרים מהר יותר ועמוק יותר לסיבי הבד.


פונקציית הבועות זמינה בכל התוכניות למעט תוכנית Eco Drum Clean (ניקוי תוף ידיו) לסביבה) זמינות הפונקציה מפורטת בטבלה הבאה.

פונקציית בועות	פונקציית בועות	תוכנית
זמינה	זמינה	Cotton (כותנה), Synthetics (סינתטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה)
לא זמינה		Super Eco Wash (כביסה חסכונית במיוחד), Outdoor Care (בגדי טיול ועבודה), Baby Care (בגדי תינוקות), Wool (צמר), Hand Wash (כביסה ידנית)
-	לא זמינה	Eco Drum Clean (ניקוי תוף ידיו לסביבה)

• ייתכן שפונקציית בועות שונה תיושם בהתאם לתוכנית.

הבחירה ב-Eco Bubble היא ברירת מחדל. לחץ על הכפתור פעם אחת כדי להפעיל את מכונת הכביסה ופעם נוספת כדי לכבותה.

1. פתח את הדלת, הכנס את הכביסה לתוף וסגור את הדלת.
2. לחץ על הכפתור **Power (הפעלה/כיבוי)**.
3. בחר פונקציה.
4. הכנס כמות מתאימה של אבקת כביסה ומרכז כביסה לתאים המתאימים בהתאם לכמות הכביסה וסגור את מגירת חומרי הכביסה.

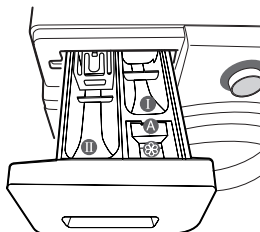

- הוסף כמות מתאימה של אבקת כביסה לתא אבקת הכביסה II, והוסף את מרכז הכביסה לתא המרכז * רק עד למפלס המרכז המרבי המצוין על-ידי קו הקצה התחתון (MAX) של "A".
- אם בחרת בתוכנית Prewash (שטיפה מוקדמת), הוסף אבקת כביסה לתא השטיפה המקדימה I בנוסף.
- לכביסה באמצעות נוזל כביסה, השאר את תיבת נוזל הכביסה במגירה (עיי' בסעיף "נוזל כביסה" בעמוד 31).

• אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.

5. לחץ על הכפתור Start/Pause (התחלה/השהייה).
- לחץ על כפתור **Start/Pause (התחלה/השהייה)** כדי להתחיל את פעולת הכביסה.
- מתבצע זיהוי אוטומטי של כמות הכביסה ופעולת הכביסה מתחילה.
- לאחר שפעולת מכונת הכביסה מתחילה, לא ניתן להוסיף או לבחור את פונקציית הבועות.

- אם מוסיפים אבקת כביסה בכמות שצוינה, נוצרת כמות מספקת של בועות.
- יש לנקות את מסנן פסולת לעתים קרובות. ניקוי מעת לעת מסייע ליצירת כמות מספקת של בועות.
- בהתאם לכמות אבקת הכביסה וכמות הכביסה, ייתכן שהבועות ייספגו וייראו ככמות קטנה.
- אף שבועות נוצרות מיד עם תחילת פעולת הכביסה, ייתכן שיחלפו כמה דקות עד שתבחין בהן.

כביסה

כביסה בעזרת בורר תוכניות הכביסה

מכונת הכביסה החדשה שלך הופכת את הכביסה לקלה הודות למערכת הבקרה האוטומאטית "Fuzzy Control (בקרה אוטומאטית)" של Samsung. כאשר אתה בוחר תוכנית כביסה, המכונה תקבע את הטמפרטורה, זמן הכביסה ומהירות הכביסה.

1. פתח את ברז המים בכיור.
 2. לחץ על הכפתור **Power (הפעלה/כיבוי)**.
 3. פתח את הדלת.
 4. הכנס למכונה את הפריטים לכביסה אחד אחרי השני ומבלי לחרוג מהקיבולת המותרת.
 5. סגור את הדלת.
 6. הוסף לתאים המתאימים אבקת כביסה, מרכך, וחומר כביסה לשטיפה מוקדמת (במידת הצורך).
- שטיפה מוקדמת זמינה רק בבחירת התוכניות Cotton (כותנה), Synthetics (סינתטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Super Eco Wash (כביסה חסכונית במיוחד), Baby Care (בגדי תינוקות). יש להשתמש באפשרות זאת עם בגדים מלוכלכים מאוד.

7. השתמש ב- **Cycle Selector (בורר תוכנית הכביסה)** כדי לבחור את התוכנית המתאימה בהתאם לסוג הכביסה: Cotton (כותנה), Synthetics (סינתטי), Denim (אריג גס), Bedding (מצעים), Dark Garment (בגדים כהים), Daily Wash (כביסה רגילה), Eco Drum Clean (ניקוי תוף ידידותי לסביבה), Super Eco Wash (כביסה חסכונית במיוחד), Outdoor Care (בגדי טיול ועבודה), Baby Care (בגדי תינוקות), Wool (צמר), Hand Wash (כביסה ידנית). נוריות החיווי הרלוונטיות יאירו בלוח הבקרה.
8. כעת תוכל לשלוט על טמפרטורת הכביסה, מספר השטיפות, מהירות הסחיטה וזמן ההשהיה באמצעות לחיצה על הכפתורים המתאימים.
9. לחץ על הכפתור **Start/Pause (התחלה/השהייה)** כדי להתחיל בכביסה. מחוון התהליך יאיר והזמן שנותר עד לסיום תוכנית הכביסה יוצג על התצוגה.

אפשרות ההשהיה


במהלך 5 הדקות הראשונות לכביסה, ניתן להוסיף/להוציא פריטים מהמכונה.

1. לחץ על הכפתור **Start/Pause (התחלה/השהייה)** כדי לפתוח את נעילת הדלת.
 2. לא ניתן לפתוח את הדלת כאשר המים חמים מדי או כאשר גובה המים גבוה מדי.
- לאחר סגירת הדלת לחץ על הכפתור **Start/Pause (התחלה/השהייה)** כדי לחזור ולהפעיל את תוכנית הכביסה.

עם סיום תוכנית הכביסה:

עם סיומה של תוכנית הכביסה, המכונה תכבה אוטומאטית.

1. פתח את הדלת.
2. הוצא את הכביסה.



הגדרות כביסה ידניות

ניתן לכבס בגדים ידנית מבלי להשתמש ב-Cycle Selector (בורר תוכנית הכביסה).

1. פתח את ברז אספקת המים.
2. לחץ על הכפתור **Power** (הפעלה/כיבוי) שעל מכונת הכביסה.
3. פתח את הדלת.
4. הכנס למכונה את הפריטים לכביסה אחד אחרי השני ומבלי לחרוג מהקיבולת המותרת.
5. סגור את הדלת.
6. הוסף לתאים המתאימים אבקת/נוזל כביסה ובמידת הצורך גם נוזל השריה.
7. לחץ על הכפתור **Temp** (טמפרטורה) כדי לבחור את הטמפרטורה הרצויה.
(מים קרים 95°C, 60°C, 40°C, 30°C, 20°C, מים קרים 95°C)
8. לחץ על כפתור **Rinse** (שטיפה) לבחירה במספר מחזורי השטיפה המבוקש.
מספר מחזורי השטיפה המרבי הוא חמישה.
9. לחץ על הכפתור **Spin** (סחיטה) כדי לבחור את מהירות הסחיטה הרצויה. (⊗ : ללא סחיטה; □ : עצור לאחר שטיפה)
10. לחץ לסירוגין על הכפתור **Delay End** (השהיית סיום) כדי לעבור בין האפשרויות הזמינות (מ-3 עד 19 שעות במדרגות של שעה). השעה המוצגת מציינת את שעת סיום תוכנית הכביסה
11. לחץ על הכפתור **Start/Pause** (התחלה/השהייה) כדי להתחיל בתוכנית הכביסה.

הנחיות לכביסה

פעל על פי ההנחיות הפשוטות שלהלן לקבלת הכביסה הנקייה והיעילה ביותר.

לפני הכביסה בדוק תמיד את ההנחיות על תווית הבגד. 

מיון את הפריטים וכבס אותם לפי הקריטריונים הבאים:

- תווית הבגד: מיון את הכביסה לפי סוג הבד: כותנה, סיבים מעורבים, סינתטיים, משי, צמר ומשי מלאכותי.
- צבע: יש להפריד בין הבדים הלבנים והצבעוניים. פריטים צבעוניים חדשים יש לכבס בנפרד.
- גודל: שילוב של פריטים בגדלים שונים באותו מחזור כביסה ישפר את תוצאות הכביסה.
- רגישות: כבס פריטים עדינים בנפרד. השתמש בתוכנית הכביסה Delicate (בדים עדינים) עבור בדי צמר, וילונות ומשי. בדוק את התוויות על הפריטים, או פנה לנספח טבלת הטיפול בבדים.

ריקון כיסים


לפני כל כביסה רוקן את כל הכיסים של פריטי הלבוש. חפצים קטנים, קשים ובעלי צורה לא שגרתית כגון, מטבעות, סכינים ואטבי נייר עלולים לגרום נזק למכונת הכביסה. אין לכבס בגדים עם אבזמים, כפתורים, או חלקים מתכתיים כבדים גדולים אחרים.

המתכת שעל הבגדים עלולה לגרום נזק לבגדים ולתוף של מכונת הכביסה. הפוך בגדים בעלי כפתורים ורקמות לפני הכביסה. רוכסנים פתוחים בזמן הכביסה עלולים לגרום נזק לסל הסחיטה. לפני הכביסה יש לרכוס רוכסנים ולקבע אותם בעזרת חוט.

פריטי לבוש עם שרוכים ארוכים עלולים להסתבך ולגרום נזק אחד לשני. דאג לקבע את השרוכים לפני הכביסה.

השרית בדי כותנה

השילוב בין מכונת הכביסה החדשה שלך ואבקת/נוזלי הכביסה החדשים מסתכם בתוצאות כביסה מושלמות, וחוסך באנרגיה, זמן, מים ואבקת/נוזל כביסה. אולם, אם בדי הכותנה שלך מלוכלכים במיוחד, השרה אותם עם אבקת/נוזל כביסה מבוסס חלבון.



כביסה

קביעת קיבולת המכונה


אין לטעון כמות כביסה גדולה מדי למכונה. היא עלולה שלא לתפקד כנדרש. השתמש בטבלה שלהלן כדי לקבוע את קיבולת מכונת הכביסה בהתאם לסוג הכביסה.

קיבולת		סוג הבד
WF806	WF906	דגם
8.0 ק"ג	9.0 ק"ג	Cotton (כותנה) - דרגת לכלוך קלה/בינונית - דרגת לכלוך גבוהה
3.0 ק"ג	3.5 ק"ג	Synthetics (סינתטי)
3.0 ק"ג	3.0 ק"ג	Denim (אריג גס)
2.0 ק"ג	2.0 ק"ג	Bedding (מצעים)
2.0 ק"ג	2.0 ק"ג	Outdoor Care (בגדי טיול ועבודה)
2.0 ק"ג	2.0 ק"ג	Wool (צמר)

• כאשר הכביסה אינה מפוזרת בצורה מאוזנת (המחווין "UE" מאיר על התצוגה), פזר את הכביסה מחדש.

- אם התכולה אינה מאוזנת, יעילות הסחיטה עלולה להיפגע.
- בכביסת מצעים או שמיכות פוך, זמן הכביסה עשוי להתארך ויעילותה של הסחיטה עשויה להיות נמוכה יותר.
- עבור מצעים או שמיכות פוך, התכולה המומלצת היא 2.5 (ק"ג) או פחות.

חזיות (לשטיפה במים) יש לכבס בתוך רשת כביסה (לרכישה בנפרד).

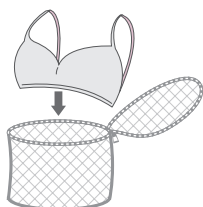

- חלקיקי המתכת של החזיות עלולים לגרום נזק לפריטי הכביסה האחרים.
- לכן יש למקמן בתוך רשת כביסה.
- פרטי לבוש קטנים וקלים כגון, גרביים, כפפות, גרביונים ומטפחות עלולים להיתקע באזור שליד הדלת. יש להכניסם לתוך רשת כביסה עדינה.

אין לכבס את רשת הכביסה לבד ללא פריטים נוספים. תיתכנה רעידות חריגות אשר עלולות לגרום למכונה לזוז ממקומה וכתוצאה מכך לפגיעה גופנית.



מידע אודות אבקת/נוזל ותוספי כביסה

באיזה אבקת/נוזל כביסה להשתמש

יש להשתמש באבקת/נוזל כביסה בהתאם לסוג הבד (כותנה, סינתטי, עדין, צמר), צבע הבד, טמפרטורת הכביסה ודרגת הלכלוך. יש להשתמש תמיד באבקת/נוזל כביסה שאינו מקציף, המיועד לשימוש במכונות כביסה אוטומטיות.

פעל על פי המלצות יצרן אבקת/נוזל הכביסה בהתאם לסוג הכביסה, דרגת הלכלוך וקשיות המים באזורך. אם אינך יודע מהי דרגת הקשיות של המים באזורך, ברר זאת ברשות המים באזורך.


אין להשתמש באבקת/נוזל כביסה שהתקשו או התמצקו, הם עלולים שלא להישטף בזמן מחזור השטיפה. בנוסף תתכן פגיעה באיכות השטיפה של המכונה, או סתימה שעלולה לגרום להצפה.

המס ביסודיות אבקת כביסה בכמות קטנה של מים לפני הוספתה למכונה.

מגירת חומרי הכביסה

מכונת הכביסה מכילה תא נפרד לאבקת/נוזל הכביסה ותא נפרד למרכז הכביסה. הוסף את כל חומרי הכביסה לתאים המתאימים לפני הפעלת המכונה.

אל תפתח את מגירת חומרי הכביסה כאשר מכונת הכביסה פועלת, שכן אתה עלול לבוא במגע עם מים חמים או קיטור.

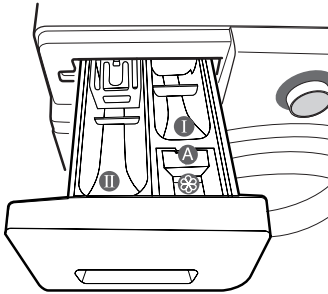


1. פתח את מגירת אבקת/נוזל הכביסה שנמצאת בחלקו השמאלי של לוח הבקרה.

2. הוסף את הכמות המומלצת של אבקת/נוזל הכביסה ישירות לתא אבקת/נוזל הכביסה II לפני הפעלתה של המכונה.

לכביסה באמצעות נוזל כביסה, השתמש בתיבת נוזל הכביסה (עיין בסעיף "נוזל כביסה" לאיתור הדגם המתאים).

• אל תוסיף אבקת כביסה לתיבת נוזל הכביסה.
3. הוסף את הכמות המומלצת של מרכז הכביסה ישירות לתא מרכז הכביסה * לפני הפעלתה של המכונה. אל תחרוג מקו המילוי המרבי (A).

אל תוסיף שום חומר כביסה (אבקה או נוזל) לתא המרכזי (*).


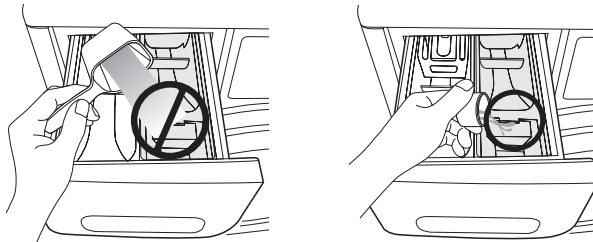


4. בעת שימוש באפשרות 'שטיפה מוקדמת', הוסף את הכמות המומלצת של חומר הכביסה לתא השטיפה המקדימה ①.

בכביסתם של פריטים גדולים אין להשתמש בסוגי אבקת/נוזלי הכביסה הבאים.

- טבליות או כמוסות של אבקת כביסה
- אבקות כביסה בתוך כדור ורשת

חובה לדלל מרכזי כביסה מרוכזים וסמיכים במעט מים לפני הכנסתם לתא ההזנה (כדי למנוע סתימה).

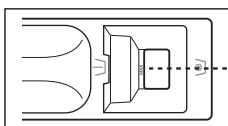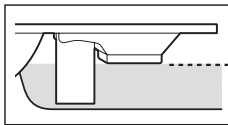


מרבי

שים לב כי מרכז הכביסה אינו עולה על גדותיו, בעת סגירת המגירה של חומרי הכביסה לאחר הוספת מרכז כביסה לתא המרכזי.

נוזל כביסה (בדגמים נבחרים)

לכביסה באמצעות נוזל כביסה, הנח את תיבת נוזל הכביסה בתוך אזור חומר הכביסה העיקרי של מגירת חומרי הכביסה ושפוך נוזל כביסה לתיבת נוזל הכביסה.

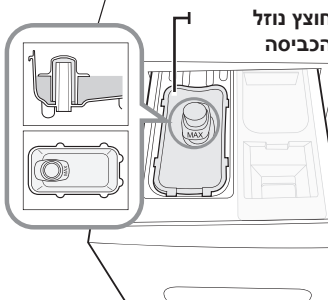

חוצץ נוזל הכביסה


- אל תשפוך נוזל מעל קו המילוי המרבי.
- בעת שימוש באבקת כביסה, הסר את תיבת נוזל הכביסה ממגירת חומרי הכביסה. אם תיבת נוזל הכביסה נשארת בפנים, נמנעת הזנה של אבקת הכביסה.
- בתום הכביסה, עשוי להישאר מעט נוזל במגירת חומרי הכביסה.

ניקוי ותחזוקת מכונת הכביסה


שמירת ניקיונה של מכונת הכביסה משפר את ביצועיה, מונע תקלות מיותרות ומאריך את חייה.

ECO DRUM CLEAN (ניקוי תוף ידדיות לסביבה)

תוכנית זו היא תוכנית ניקוי עצמי להסרת עובש שעלול להיווצר בתוך מכונת הכביסה.

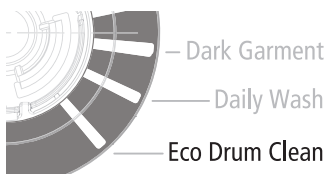

1. לחץ על הכפתור **Power** (הפעלה/כיבוי).
 2. כוון את ברור התוכניות לתוכנית ECO Drum Clean (ניקוי תוף ידדיות לסביבה).
 - באפשרותך להשתמש רק בפוקנציה Delay End (השהיית סיום).
 - Eco Drum Clean (ניקוי תוף ידדיות לסביבה) מוגדרת ל-70°C.
 - לא ניתן לשנות את הטמפרטורה.
- כאשר מכניסים בגדים לתוך המכונה תיקבע באופן אוטומטי תוכנית כותנה 30°C עם כמות מים בינונית.

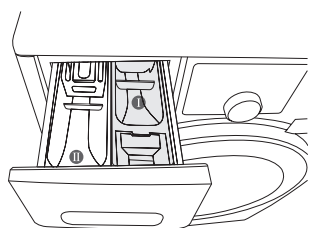


3. שפוך כמות מתאימה של תכשיר ניקוי לתא אבקת הכביסה ② וסגור את מגירת חומרי הכביסה (בעת ניקוי התוף באמצעות תכשיר ניקוי).
 - הקפד להשתמש בתכשיר הניקוי המומלץ לניקוי תוף.
 - קיימים תכשירי ניקוי בצורת אבקה ובצורת נוזל לניקוי התוף.
 - ניתן להשתמש בתכשיר הניקוי בצורת נוזל רק עם תיבת נוזל הכביסה (אופציונלי).

4. לחץ על הכפתור **Start/Pause** (התחלה/השהייה).
 - לאחר שתלחץ על כפתור **Start/Pause** (התחלה/השהייה), התוכנית Eco Drum Clean (ניקוי תוף ידדיות לסביבה) תתחיל לפעול.

- תוכנית Eco Drum Clean (ניקוי תוף ידדיות לסביבה) מאפשרת לנקות את התוף מבלי להשתמש בתכשיר ניקוי.
- לעולם אל תשתמש בתוכנית Eco Drum Clean (ניקוי תוף ידדיות לסביבה) כאשר יש כביסה במכונת הכביסה. פעולה זו עלולה לגרום נזק למרקם הכביסה או לבעיה במכונת הכביסה.
- לעולם אל תשתמש בחומר כביסה רגיל בתוכנית Eco Drum Clean (ניקוי תוף ידדיות לסביבה).
- השתמש רק בעשירית הכמות של תכשיר הניקוי לתוף המומלצת על-ידי יצרן תכשיר הניקוי.
- מאחר ששימוש בחומר הלבנה על-בסיס כלור עלול לגרום לשינוי צבע במוצר, הקפד להשתמש רק בחומרי הלבנה על בסיס חמצן.
- תכשיר ניקוי מסוג אבקה: השתמש ב[חומר הלבנה מסוג אבקה] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].
- תכשיר ניקוי מסוג נוזל: השתמש ב[חומר הלבנה על-בסיס חמצן מסוג נוזל] או ב [תכשיר ניקוי המיועד לניקוי תוף בלבד].




זהירות

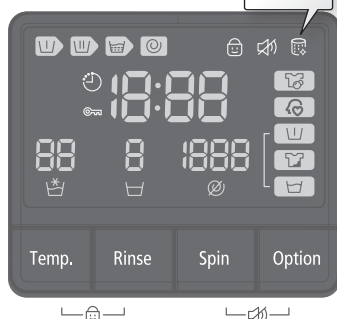

פונקציית ההתראה האוטומטית של Eco Drum Clean (ניקוי תוף ידידותי לסביבה)

- אם המחווה של "Eco Drum Clean" (ניקוי תוף ידידותי לסביבה) על-גבי התצוגה והנורית על בורר התוכניות מאירים לאחר כביסה, פירוש הדבר כי נדרש ניקוי תוף. במקרה זה, הוצא את הכביסה ממכונת הכביסה, לחץ על לחצן ההפעלה ונקה את התוף על-ידי ביצוע תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה).
- אם לא תבצע את תוכנית Eco Drum Clean (ניקוי תוף ידידותי לסביבה), המחווה של "Eco Drum Clean" על-גבי התצוגה והנורית על בורר התוכניות ייכבו. אולם, לאחר שתי הפעלות של מכונת הכביסה, המחווה של Eco Drum Clean (ניקוי תוף ידידותי לסביבה) על-גבי התצוגה והנורית על בורר התוכניות יאירו שוב. אין לכך השפעה על פעולת מכונת הכביסה.
- אף שבדרך כלל, ההתראה האוטומטית של Eco Drum Clean (ניקוי תוף ידידותי לסביבה) מופיעה אחת לחודש בקירוב, פרק זמן זה עשוי להשתנות בהתאם לתדירות השימוש במכונת הכביסה.
- **במקרה של התראה, נקה גם את מסנן הפסולת (עיין בסעיף "ניקוי מסנן הפסולת" בעמוד 34).** אם לא תעשה כן, הביצועים של פונקציית הבועות עלולים להיפגע.

ניקוז מכונת הכביסה במקרה חירום

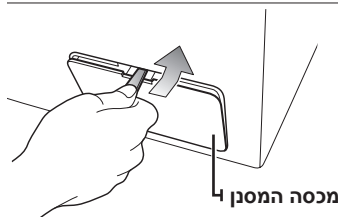

1. נתק את מכונת הכביסה משקע החשמל.
2. פתח את מסכה המסנן בעזרת מטבע או מפתח.



3. פתח את הפקק של צינור ניקוז החירום על-ידי משיכתו.



4. אחוז בפקק שבקצה צינור ניקוז המים בחירום ומשוך אותו החוצה בזהירות.
5. נקז את כל המים לכלי או קערה.
6. כמות המים עשויה להיות גדולה מהצפוי. הכן קערה גדולה.
7. חבר מחדש את הפקק של צינור ניקוז החירום והכנס את צינור הניקוז.
7. סגור את מסכה המסנן.

ניקוי ותחזוקת מכונת הכביסה


ניקוי מסנן הפסולת

אנו ממליצים לנקות את מסנן הפסולת 5 או 6 פעמים בשנה, או כאשר מוצגת הודעת השגיאה "5E". (עיין בסעיף הקודם: "ניקוז מכונת הכביסה במקרה חירום".)

אם חומר זר מצטבר במסנן הפסולת, הביצועים של פונקציית הבועות עלולים להיפגע.




לפני ניקוי מסנן הפסולת, הקפד לנתק את כבל החשמל.

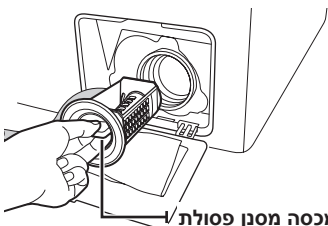

1. תחילה נקז את המים המיותרים (עיין בסעיף "ניקוז מכונת הכביסה במקרה חירום" בעמוד 33).

אם תפריד את המסנן מבלי לנקז את יתרת המים, הם עלולים לזרום החוצה.

2. פתח את מכסה המסנן בעזרת מטבע או מפתח.
3. הברג החוצה את מכסה הניקוז בחירום על ידי סיבובו שמאלה ונקז את כל המים.
4. הברג החוצה את מכסה מסנן הפסולת.

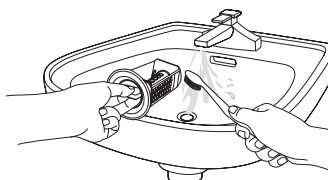

5. שטוף ונקה את הלכלוך ממסנן הפסולת. וודא כי מדחף משאבת הניקוז שנמצא מאחורי מסנן הפסולת אינו חסום.
6. הברג את מכסה מסנן הפסולת חזרה למקומו.
7. סגור את מכסה המסנן.


אל תפתח את פקק מסנן הפסולת כאשר מכונת הכביסה פועלת, שכן מים חמים עלולים לזרום החוצה.

- הקפד להחזיר את מכסה המסנן למקומו לאחר ניקוי המסנן. מסנן שלא יוחזר למקומו, עלולה לגרום לנזילת מים או לתקלה בפעולת מכונת הכביסה.
- לאחר ניקוי המסנן יש להרכיב את המסנן במלואו.

ניקוי חלקי החיצוני של מכונת הכביסה



1. יש לנגב את משטחיה החיצוניים של מכונת הכביסה, כולל לוח הבקרה, בעזרת מטלית רכה וחומר ניקוי ביתי שאינו שוחק.
2. יש לייבש את המשטחים בעזרת ניגוב במטלית רכה.
3. אין לשפוך מים לתוך מכונת הכביסה.

ניקוי גומחת ומגירת אבקת/נוזל הכביסה

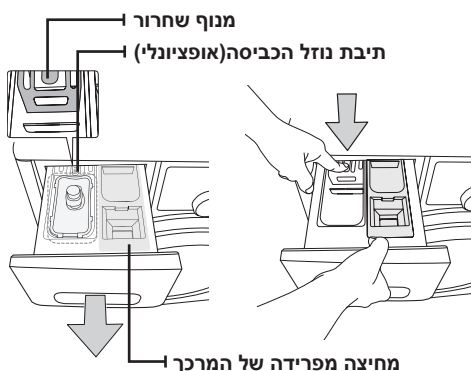

1. לחץ על מנוף השחרור בחלקה הפנימי של מגירת אבקת/נוזל הכביסה ומשוך את המגירה החוצה.
2. הסר את המחיצה המפרידה של המרכז ואת תיבת נוזל הכביסה (אופציונלי) ממגירת חומרי הכביסה.

3. שטוף את כל החלקים במים זורמים.

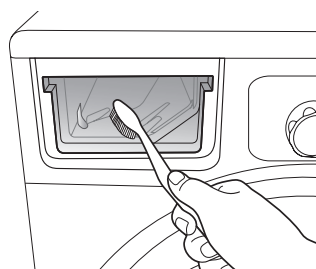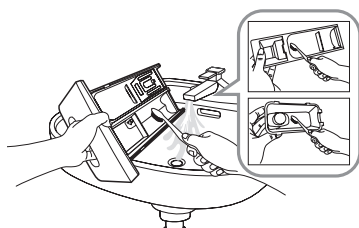

4. נקה את גומחת המגירה בעזרת מברשת שיניים ישנה.
5. החזר את המחיצה המפרידה של המרכז ואת תיבת נוזל הכביסה (אופציונלי) למקומן על-ידי דחיפתן בכוח לתוך המגירה.
6. החזר את המגירה חזרה למקומה.
7. נקה את כל שאריות אבקת/נוזל הכביסה. הפעל תוכנית כביסה מלאה כשהמכונה ריקה.

ניקוי מסנן הרשת של צינור המים

יש לנקות את מסנן הרשת של צינור המים לפחות פעם בשנה, או כאשר מוצגת הודעת השגיאה "4E".

1. סגור את ברז אספקת המים של מכונת הכביסה.
2. הברג החוצה ונתק את צינור המים מחלק האחורי של מכונת הכביסה. כדי למנוע ממים לגלוש החוצה עקב לחץ האוויר בצינור, כסה את הצינור בבד.
3. משוך בעדינות את מסנן הרשת מקצהו של הצינור בעזרת מלקחים או צבת ושטוף אותו במים זורמים עד שיהיה נקי. נקה גם את חלקו הפנימי והחיצוני של המחבר המתברג.
4. הרכב את המסנן חזרה למקומו.
5. הברג חזרה את הצינור למכונת הכביסה.
6. וודא כי המחברים מהודקים היטב, ופתח את הברז.

ניקוי ותחזוקת מכונת הכביסה

תיקון מכונת כביסה שקפאה

אם הטמפרטורות צונחות מתחת לנקודת הקיפאון של המים ומכונת הכביסה שלך קפאה:

1. נתק את מכונת הכביסה מהחשמל.
2. שפוך מים חמים על הברז כדי לשחרר את צינור אספקת המים.
3. נתק את צינור אספקת המים והשרה אותו במים חמים.
4. שפוך מים חמים לתוך תוף מכונת הכביסה והמתן 10 דקות.
5. חבר מחדש את צינור אספקת המים אל ברז המים ובדוק את תקינות אספקת וניקוז המים.

אחסון מכונת הכביסה

אם אתה מתכוון לאחסן את מכונת הכביסה שלך למשך פרק זמן ממושך, כדאי לנקזה ולנתקה מהחשמל והצנרת. שאריות מים בצנרת ובחלקיה הפנימיים של המכונה עלולים לגרום לה נזק במהלך האחסון.

1. בחר במחזור הכביסה **Cotton (כותנה)** ולחץ על הלחצן **Quick Wash (כביסה מהירה)** והרץ את מחזור הכביסה כשהמכונה ריקה.
 2. סגור את ברזי המים ונתק את הצינורות.
 3. נתק את המכונה משקע החשמל והשאר את דלת המכונה פתוחה כדי לאפשר את ייבוש התוף.
- אם מכונת הכביסה אוחסנה בטמפרטורה שמתחת לאפס מעלות צלזיוס, המתן ואפשר לכל שאריות המים להתאדות לפני השימוש במכונה. 

קודי מידע ואיתור ופתרון תקלות

קרא בעיון את הסעיפים הבאים אם מכונת הכביסה שלך...

הבעיה	פתרון
לא ניתן להפעיל את המכונה	• וודא כי מכונת הכביסה מחוברת לחשמל. • וודא כי דלת המכונה סגורה לגמרי. • וודא כי ברז(י) אספקת המים פתוחים. • וודא כי לחת על הכפתור Start/Pause (התחלה/השהייה).
אין אספקת מים, או שאין מספיק מים	• פתח את ברז אספקת המים במלואו. • וודא כי צינור אספקת המים אינו קפוא. • ישר את צינור אספקת המים. • נקה את המסנן של צינור אספקת המים.
אבקת/נוזל הכביסה נשאר במגירת אבקת/נוזל הכביסה לאחר סיומה של תוכנית הכביסה	• וודא כי מכונת הכביסה פועלת בלחץ מים מספק. • וודא כי אבקת/נוזל הכביסה הוסף למרכזה של מגירת אבקת/נוזל הכביסה.
המכונה רועדת או מרעישה יתר על המידה	• וודא כי מכונת הכביסה מוצבת על משטח מישורי. אם המשטח אינו מישורי, התאם את גובהה של רגל מכונת הכביסה כדי לאזנה. • וודא כי בורגי התובלה הוסרו. • וודא כי מכונת הכביסה אינה באה במגע עם חפצים אחרים. • וודא כי תכולת הכביסה מפוזרת באופן אחיד.
מכונת הכביסה אינה מנקזת ו/או סוחטת	• יישר את כבל הניקוז. דאג לשחרר צינורות מקופלים ומפותלים. • וודא כי מסנן הפסולת אינו סתום.
הדלת נעולה או שאינה נפתחת.	• הדלת תיפתח רק 3 דקות לאחר שהמכונה עוצרת את פעולתה או שהחשמל מנותק.

אם הבעיה ממשיכה צור קשר עם מרכז השירות של Samsung באזורך.

קודי מידע ואיתור ופתרון תקלות

קודי מידע

אם חלה תקלה בפעולת מכונת הכביסה, אתה עשוי לראות קוד מידע על-גבי התצוגה. במקרה כזה, עיין בטבלה הבאה ונסה את הפתרון המוצע לפני שתפנה לשירות הלקוחות.

הקוד	הפתרון
dE	• וודא כי דלת המכונה סגורה לגמרי. • וודא כי הכבסים לא נתקעו בדלת המכונה.
4E	• וודא כי ברז(י) אספקת המים פתוחים. • בדוק את לחץ המים. • נקה את מסנני הרשת של צינור המים.
5E	• נקה את מסנן הפסולת. • וודא כי צינור הניקוז מותקן בצורה הנכונה. • ניקוי מסנן הרשת של צינור המים
UE	• תכולת הכביסה אינה מאוזנת. פזר מחדש את תכולת הכביסה. אם יש צורך לכבס רק פריט בודד כגון חלוק רחצה, או זוג מכנסי ג'ינס, יתכן שתוצאת הסחיטה לא תהיינה משביעת רצון וקוד השגיאה "UE" יוצג על התצוגה.
cE/3E	• התקשר לשירות הלקוחות.
Sd/Sud	• הודעה זו מופיעה כאשר מתגלה כמות רבה מיד של קצף. היא מוצגת גם כאשר הקצף מסולק. כאשר מסתיים הסילוק, המחזור הרגיל ממשיך. (זו אחת הפעולות הרגילות. זו הודעת שגיאה למניעת תקלות הנובעות מאי-חישה.
Uc	• אם מתח החשמל אינו יציב, מכונת הכביסה תפסיק לפעול באופן זמני כדי להגן על החלקים החשמליים שלה. • אם יסופק המתח המתאים, המחזור ישוב לפעול באופן אוטומטי.

אם נתקלת בקוד שאינו מופיע בטבלה שלעיל, או אם הפתרון המוצע לא עזר, התקשר למרכז השירות של Samsung, או למשווק Samsung באזורך.

טבלת תוכניות הכביסה

טבלת תוכניות הכביסה

(אפשרות משתמש)

מהירות סחיטה (מרבית) סל"ד	טמפרטורה מקסימאלית (°C)	אבקת/נוזל כביסה			תכולה מרבית (ק"ג)		תוכנית
		מרכז	כביסה	Pre-Wash (שטיפה מוקדמת)	WF806	WF906	
WF906U4 WF806U4							
1400	95	●	כן	●	8.0	9.0	Cotton (כותנה)
1200	60	●	כן	●	3.0	3.5	Synthetics (סינתטי)
800	60	●	כן	●	3.0	3.0	Denim (אריג גס)
800	40	●	כן	●	2.0	2.0	Bedding (מצעים)
1200	40	●	כן	●	4.0	4.0	Dark Garment (בגדים כהים)
1400	60	●	כן	●	4.0	4.0	Daily Wash (כביסה יומית)
400	70	-	כן	-	-	-	Eco Drum Clean (ניקוי תוף ידיוני לסביבה)
1200	40	●	כן	●	4.0	4.0	Super Eco Wash (כביסה חסכונית במיוחד)
1200	40	●	כן	-	2.0	2.0	Outdoor Care (בגדי טיול ועבודה)
1400	95	●	כן	●	4.0	4.0	Baby Care (בגדי תינוקות)
800	40	●	כן	-	2.0	2.0	Wool (צמר)
400	40	●	כן	-	2.0	2.0	Hand Wash (כביסה ידנית)

Quick Wash (כביסה מהירה)	השריה	שטיפה מוגברת	גיהוץ קל	Delay End (השהיית סיום)	Eco Bubble	תוכנית
●	●	●	●	●	●	Cotton (כותנה)
-	●	●	●	●	●	Synthetics (סינתטי)
-	●	●	●	●	●	Denim (אריג גס)
-	●	●	●	●	●	Bedding (מצעים)
-	-	●	●	●	●	Dark Garment (בגדים כהים)
-	●	●	●	●	●	Daily Wash (כביסה יומית)
-	-	-	-	●	-	Eco Drum Clean (ניקוי תוף ידיוני לסביבה)
-	●	●	●	●	●	Super Eco Wash (כביסה חסכונית במיוחד)
-	-	-	-	●	●	Outdoor Care (בגדי טיול ועבודה)
-	●	●	●	●	●	Baby Care (בגדי תינוקות)
-	-	-	-	●	●	Wool (צמר)
-	-	-	-	●	●	Hand Wash (כביסה ידנית)

1. מחזור כביסה עם שלב שטיפה מוקדמת מתארך ב-18 דקות.
2. הנתונים אודות משך הזמן של התוכניות נמדדו תחת התנאים המפורטים בתקנים IEC 60456 / EN 60456. Cotton 60°C+Intensive+Eco Bubble (כותנה ב-60°C+ שטיפה מוגברת Eco Bubble+) היא תוכנית במפרטי EN60456.
3. הפעל את המצב כיול בסיום התקנת המכונה (עמוד 20).
4. בבתי הלקוחות אורכן של תוכניות הכביסה עשוי להיות שונה מהערכים שבטבלה לעיל עקב הבדלים בלחץ וטמפרטורת המים, משקל וסוג הכביסה.
4. כאשר נעשה שימוש בפונקציה ה-Intensive (מוגברת), משך הזמן של כל תוכניות הכביסה יתארך.

טבלת תוכניות הכביסה 39_

טבלת טיפול בבדים

הסמלים הבאים מורים איך לטפל בבגד. התוויות מכילות ארבעה סמלים בסדר הבא: כביסה, הלבנה, ייבוש וגיהוץ וניקוי יבש, במידת הצורך. השימוש במסלים מבטיח עקביות בין יצרני ביגוד שונים, ובין פריטי לבוש ממדינות שונות. פעל על פי ההוראות שעל תווית הבגד כדי להאריך את חייו של הבגד ולהפחית בעיות כביסה.

ניתן לגהץ בטמפרטורה מרבית של 100°C		חומר עמיד	
אסור לגהץ		בד עדין	
מתאים לניקוי יבש עם כל סוג של ממש		ניתן לכבס את הבגד בטמפרטורה של 95°C	
לניקוי יבש עם פרכלוריד, דלק מציתים, אלוהול טהור או R113 בלבד.		ניתן לכבס את הבגד בטמפרטורה של 60°C	
לניקוי יבש עם דלק תעופה, דלק מטוסים, אלוהול טהור או R113 בלבד.		ניתן לכבס את הבגד בטמפרטורה של 40°C	
לא מיועד לניקוי יבש		ניתן לכבס את הבגד בטמפרטורה של 30°C	
לייבוש על משטח		מתאים לכביסה ידנית	
ניתן לייבוש בתלייה		לניקוי יבש בלבד	
לייבוש על קולב בגדים		ניתן להלבין במים קרים	
לייבוש במייבש, חום רגיל		אסור להלבין	
לייבוש במייבש, חום מופחת		ניתן לגהץ בטמפרטורה מרבית של 200°C	
אין לייבוש במייבש		ניתן לגהץ בטמפרטורה מרבית של 150°C	

הגנת הסביבה

- מכשיר זה מיוצר מחומרים ממוחזרים. אם תחליט להשליך מוצר זה לפסולת, אנא קרא את התקנות המקומיות בנוגע השלכה לפסולת. חתוך את כבל החשמל כדי שלא ניתן יהיה לחבר את המכשיר לשקע חשמל. פרק את הדלת כדי למנוע מילדים ובעלי חיים קטנים להילכד בתוך המכונה.
- אין להשתמש בכמות אבקת/נוזל כביסה גדולה מהמומלץ בהוראות היצרן.
- השתמש במסירי כתמים ומלבינים בשלב קדם הכביסה רק במקרים שבאמת מחייבים זאת.
- חסוך מים וחשמל על ידי כביסה של תוף מלא בלבד (הכמות המדויקת תלויה בתוכנית הכביסה).

הצהרת תאימות

מכשיר זה תואם לתקנות הבטיחות האירופאית, דירקטיבה 93/68 של האיחוד האירופאי ולתקן EN 60335.

מפרט

מכונת כביסה פתח קדמי		סוג		
WF906U4SA**		מידות		
600 מ"מ (ר) × 600 מ"מ (ע) × 850 מ"מ (ג)				
50kPa ~ 800kPa		לחץ מים		
54 ליטר		נפח מים		
WF906U4SA**		משקל נטו		
70 ק"ג				
9.0 ק"ג		קיבולת כביסה וסחיטה		
WF906U4SA**		דגם	צריכת אנרגיה	
60 וואט	220 וולט	כביסה		
60 וואט	240 וולט			
2000 וואט	220 וולט	כביסה וחימום		
2400 וואט	240 וולט			
WF906U4SA**		דגם		סחיטה
400 וואט		230 וולט		
34 וואט		שאיבה		
WF906U4SA**		דגם	מהירות סיבוב	
1400		סל"ד		





מראה ומפרט המוצר נתונים לשינוי לצורך שיפור המוצר, ללא הודעה מוקדמת.

נספח

מפרט

סוג		מכונת כביסה פתח קדמי		
מידות	WF806U4SA**			
	600 מ"מ (ר) × 600 מ"מ (ע) × 850 מ"מ (ג)			
לחץ מים	50kPa ~ 800kPa			
נפח מים	48 ליטר			
משקל נטו	WF806U4SA**			
	67 ק"ג			
קיבולת כביסה וסחיטה		8.0 ק"ג		
צריכת אנרגיה	דגם		WF806U4SA**	
	כביסה	220 וולט		60 וואט
		240 וולט		60 וואט
	כביסה וחימום	220 וולט		2000 וואט
		240 וולט		2400 וואט
	סחיטה	דגם	WF806U4SA**	
		230 וולט	400 וואט	
	שאיבה		34 וואט	
מהירות סיבוב	דגם		WF806U4SA**	
	סל"ד		1400	

מראה ומפרט המוצר נתונים לשינוי לצורך שיפור המוצר, ללא הודעה מוקדמת.





צור קשר עם מרכזי SAMSUNG ברחבי העולם
אם יש לך שאלות או הערות כלשהן בנוגע למוצרי Samsung, אנא צור קשר עם מרכז שירות הלקוחות של
Samsung.

מספר קוד: DC68-03205Q-02_HB